# **FOREWORD**

This Parts Catalogue is related to the parts in use for the Yamaha XS1100RH (5N5) When you are ordering replacement parts for the XS1100RH (5N5), refer to this Parts Catalogue and quote both part numbers and part names correctly.

 Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.

It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

### 2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

U.R. Use size (thickness) and/or number as required.

U.N. Use as many as you need.

A.P. Alternate Parts

L.M. Local Made

F# Frame No. (Applicable machine No.)

- The parts marked with (\*) in the parts number column of this Catalogue are not supplied with by Yamaha, those have to be found locally.
- Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot ( ) is put against the name of each part.

EXAMPLE

CARBURETOR ASS'Y

. JET, pilot

. NOZZLE, main

5. Indication of No. of constituent parts for assembly

 
The numeral appearing to the right of each constituent part nuder the description indicates the quantity of such parts for each individual assembly unit.

 
## EXAMPLE

Part No.	Description	Q'ty	Remarke
2F5-83310-60	FRONT FLASHER LIGHT ASS'Y	2	
115-83311-60	. BULB (6V-18W)	1 -	
1M1-83309-60	REFLECTOR	1	

#### 6. Initial Serial No. and Color Code

(A)	Frame Serial No.	5N5-0000101 and following
<b>B</b>	Engine Serial No.	5N5-0000101 and following





Color Code	color Code Color Name			
6G	NEW YAMAHA BLACK	NYB		

Applicable colors of graphics are represented in the "Remarks" column by the letter(s) appropriately picked out of the full word(s) showing such colors.

## EXAMPLE

Part No.	Description	Qʻty	 Remarks
2N4-24110-00-X5	FUEL TANK COMP.	1	MAXIM RED
3J1-24240-10	. GRAPHIC, fuel tank set	1	for MXR

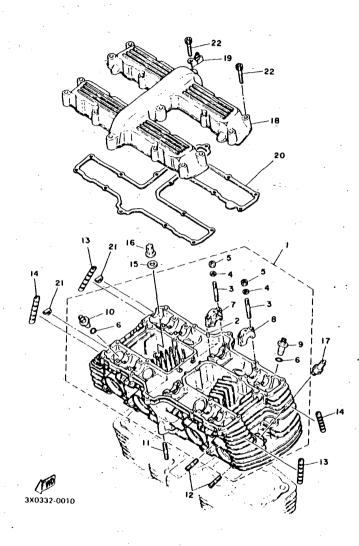


FIG. 1 CYLINDER HEAD REF. NO. PART NO. DESCRIPTION Q'TY REMARKS CYLINDER HEAD ASSY 1 2H9-11110-00 2 93603-09004 .PIN. dowel 3 90116-06228 .BOLT, stud .WASHER, Plate 4 90201-06431 20 5 95301-06600 · NUT 20 6 93210-11313 . . D-R I NG 7 -137-12173-10 .CAP, camshaft 1 8 137-12183-10 ·CAP, camshaft 2 9 137-11133-10 .GUIDE, intake valve (IST O/S) 10 1J7-11134-10 .GUIDE. exhaust valve (1ST D/S) 11 90116-08161 BOLT, stud 12 95621-08615 BOLT, stud 13 2H7-11161-00 ABSORBER 1 14 2H7-11162-00 ABSORBER 2 15 90201-11597 WASHER, Plate 16 90176-10033 NUT. crown 17 94701-00116 PLUG, sPark (NGK BP-6ES) 18 2H9-11191-00 COVER, cylinder head 1 19 90465-10129 CLAMP

GASKET+ head cover 1

PLUG

BOLT

20 2H7-11193-00

21 17-11138-00

22 91316-06035

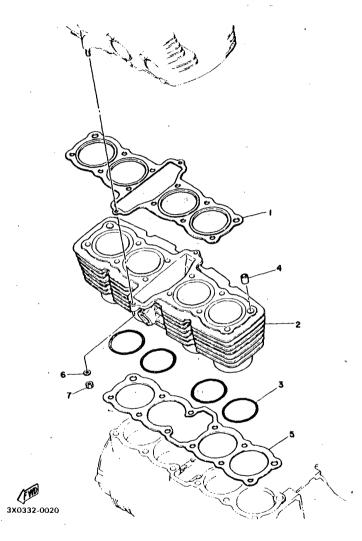


FIG. 2 CYLINDER

REF. NO. PART NO.	DESCRIPTION	q'ty	REMARKS
1 2H7-11181-02	GASKET, cylinder head 1	1	^ <b>^</b>
/ 2 2H9-11310-00	CYLINDER	f	•
3 93210-77363	O-RING	4	
_ 4 91830-24016	PIN, dowel	2	
5 2H7-11351-01	GASKET+ cylinder	1	
<b>6</b> 90201-08382	WASHER. Plate	2	
7 95316-08600	TUN	2	

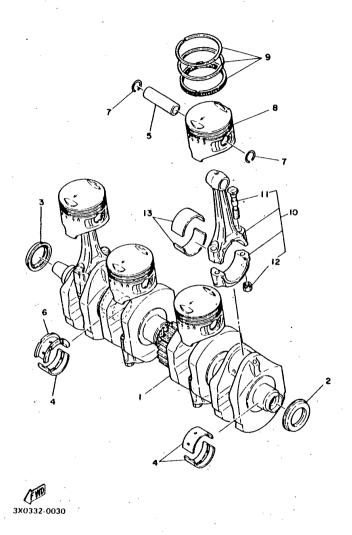


FIG. 3 CRANKSHAFT.PISTON

REF		DESCRIPTION	Q'TY	REMARKS
-1	2H7-11411-02	CRANKSHAFT	1	
<u>/</u> 2	93101-32087	OIL SEAL	1	
<b>-</b> 3	93101-32088	OIL SEAL	1	
- 4	2H7-11416-01	PLANE BEARING, crankshaft 1		blue
_	2H7-11416-11	PLANE BEARING, crankshaft 1	9 UR	black
	2H7-11416-21	PLANE BEARING, crankshaft 1	9 UR	brown
1.	2H7-11416-31	PLANE BEARING, crankshaft 1	9 UR	Breen
_	2H7-11416-41	PLANE BEARING. crankshaft 1	9 UR	yellow
_ 5	2H7-11633-01	PIN, Piston	4	*
<u> </u>	2H7-11417-01	PLANE BEARING, crankshaft 2	I UR	blue
/	2H7-11417-11	PLANE BEARING, crankshaft 2	1 UR	black
_	2H7-11417-21	PLANE BEARING+ crankshaft 2	I UR	brown
1	2H7-11417-31	PLANE BEARING, crankshaft 2	1 UR	<b>g</b> reen
. –	2H7-11417-41	PLANE BEARING, crankshaft 2	1 UR	yellow
1	90468-12069	CLIP	8	-
/ 8	2H9-11631-01-45	PISTON (STD)	4 UR	AP
	2H9-11631-01-46	PISTON (STD)	4 UR	AP
	2H9-11635-00	PISTON (1ST 0/S 0.25MM)	4 AP	
/	2H9-11636-00	PISTON (2ND 0/S 0.50MM)	4 AP	
1	2H9-11637-00	PISTON (3RD 0/S 0.75MM)	.4 AP	
	2H9-11638-00	PISTON (4TH O/S 1.00MM)	4 AP	
<i>,</i> 9.	3J2-11610-00	PISTON RING SET (STD)	4 AP	STD
/	3J2-11610-10	PISTON RING SET (1ST 0/S)	4 AP	
/	3J2-11610-20	PISTON RING SET (2ND O/S)	4 AP	
/	3J2-11610-30	PISTON RING SET (3RD 0/S)	4 - AP	
_	3J2-11610-40	PISTON RING SET (4TH O/S)	4 AP	
10	1J7-11650-01	CONNECTING ROD ASSY	4	
11	1J7-11654-00	·BOLT, connecting rod	, 2	

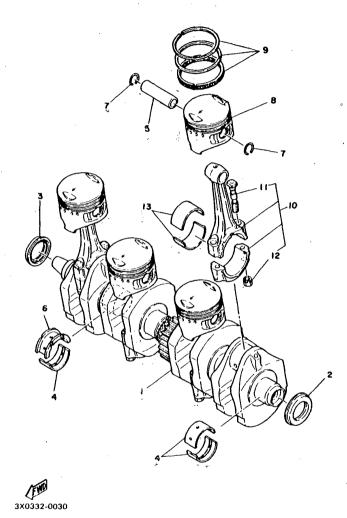


FIG. 3 CRANKSHAFT.PISTON

REF. NO. PART NO.		DESCRIPTION	a't	Y	REMARKS
12	90170-09192	•NUT	2		
/13	2F3-11656-00	PLANE BEARING, connecting r	od 8	UR	blue
	2F3-11656-10	PLANE BEARING, connecting r	rod B	UR	black
_	2F3-11656-20	PLANE BEARING, connecting r	rod 8	UR	brown
/	2F3-11656-30	PLANE BEARING, connecting r	rod 8	UR	Ereen
·_	2F3-11656-40	PLANE BEARING, connecting r	rod 6	UR	yellow

#### CONNECTING ROD BEARING SELECTION

Housing No. - Shaft No. \* Bearing No.


	Center thickness T	Housing diameter	No.	Shaft diameter	No.	Oil clearance
		45 5# + 0.024 + 0.016	4	42.54 0 008	[1]	0 042 0.064
BEARING 1	1.5 + 0.001	45.5¢ + 0.016 + 0.008	6	42.5¢ - 0.009 - 0.016	2	0.042 - 0.064
BEARING 2	1.6 - 0.003	45.5¢ +0.008	6	42.54 - 0.017	3	0.042 0.064
BEARING 3	1.5 - 0.011		11			0.042 - 0.064
BEARING 4 (GREEN)	1.5 - 0.011 - 0.015				П	0.042 - 0.064
BEARING 6	1.6 -0015				H	0 042 - 0 064

#### CRANKSHAFT BEARING SELECTION

Housing No. - Shatt No. - Rearing No.

	Center thickness T	Housing diameter	No.	Shaft diameter	No.	Oil clearance
		39¢ + 0.024 + 0.016	1	364 - 0.008	1	0 035 - 0 059
BEARING 1	1.5 + 0.006	39¢ + 0.016 + 0.008	6	36¢ -0.009 -0.016	2	0 036 - 0 059
BEARING 2	1.5 + 0.002	39¢ +0.008	6	36¢ - 0.017 0.024	3	0.035 - 0.059
BEARING 3	1.5 - 0.002 - 0.006	j				0.035 - 0.069
BEAHING 4	1.5 - 0.006 - 0.010	1				0.035 0.059
BEARING 5	1.6 -0.010 -0.014					Ø 035 Ø.059

B<sub>5</sub>

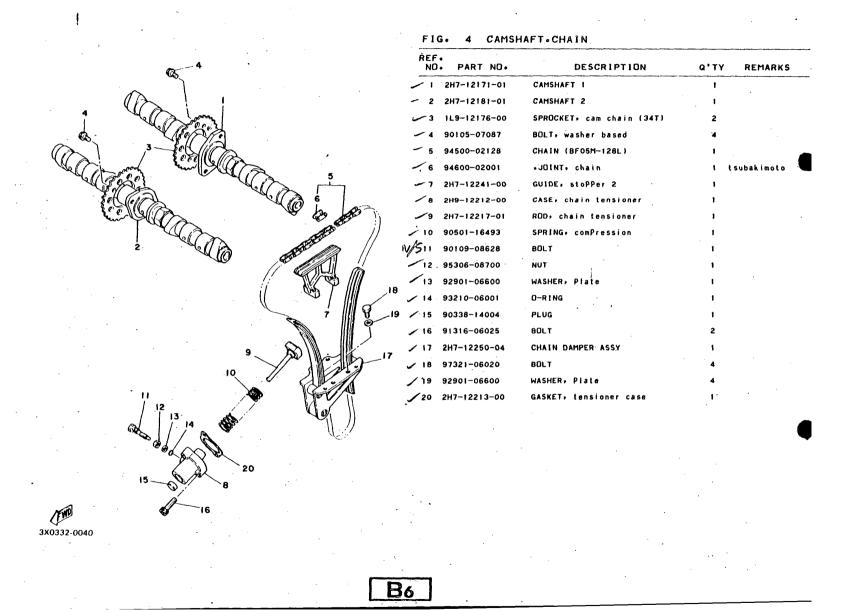

3X0332-1050

FIG. 5 VALVE

REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
1 137-12111-01	VALVE, intake	4	~
2 1J7-12121-00	VALVE, exhaust	4	
3 137-12116-00	SEAT, valve spring	8	
4 90501-39414	SPRING, compression	8	
5 90501-28415	SPRING, compression	8	
6 2F3-12117-00	RETAINER, valve spring	8	
7 137-12118-00	COTTER, valve	16	
8 1J7-12119-01	SEAL» valve stem	8	
9 137-12169-01	PAD» adjusting (2.00)	8 U	R
/ 1J7-12169-11	PAD, adjusting (2.05)	8 UF	₹
/ 1J7-12169-21	PAD, adjusting (2.10)	8 UF	₹
JJ7-12169-31	PAD, adjusting (2.15)	. 8 U	₹ '
√ 1J7-12169-41	PAD, adjusting (2.20)	8 UF	1
- 1J7-12169-51	PAD, adjusting (2.25)	8 UF	₹
J7-12169-61	PAD, adjusting (2.30)	8 UF	ì
/1J7-12169-71	PAD, adjusting (2.35)	8 UF	₹
1J7-12169-81	PAD, adjusting (2.40)	8 UR	ł
JJ7-12169-91	PAD, adjusting (2.45)	8 UR	ì
✓1J7-12169-A1	PAD, adjusting (2.50)	1 UR	ł
1J7-12169-E1	PAD, adjusting (2.55)	8 UR	t
✓ 1J7-12169-F1	PAD, adjusting (2.60)	8 UR	1
√1J7-12169-G1	PAD. adjusting (2.65)	8 UR	ì
₩1J7-12169-H1	PAD, adjusting (2.70)	8 UR	ì
√1J7-12169-J1	PAD, adjusting (2.75)	8 UR	ı
/1J7-12169-K1	PAD, adjusting (2.80)	8. UR	t
d/1J7-12169-L1	PAD+ adjusting (2.85)	8 UR	t
✓ 1J7-1216,9-MI	PAD. adjusting (2.90)	6 UF	t
√1J7~12169~N1	PAD, adjusting (2.95)	8 UF	ŧ

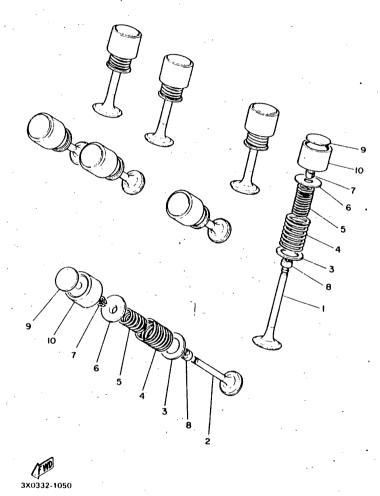


	FIG	•	5	VAL	.VE							
. !	REF (		PAŔT	NO.		DESCR	IPTION	Q'	TY	REMARKS		_
_	9	IJ	7-121	69-R1	PAD	adJusting	(3.00)		8 U	R		
	<i></i>	IJ	7-121	69-TI	PAD	• adjusting	(3.05)		8 U	R		
	~	137	7-121	69-U1	PAD	adjusting	(3.10)		8 U	R		į.
		117	-121	69-V I	PAD.	adJusting	(3.15)		8 U	R		74.
	/	137	-121	69-W1	PAD,	adjusting	(3.20)		<b>B</b> U	R	_	
_	10	4H7	-121	53-01	LIFT	TER, valve			8 ·			â

REF. NO. PART NO. DESCRIPTION Q'TY REMARKS ✓ 1 2H7-13336-00 HOUSING, rotor 2H7-13330-00 PUMP SHAFT ASSY 2H7-13316-00 COVER, PumP 90149-06126 SCREW 2H7-13325-00 GEAR. PumP driven (52T) 93603-12007 PIN, dowel WASHER. spring 92901-06100 95303-06600 NUT N/S9 2H7-13483-00 PLUNGER, relief 90501~18499 SPRING, compression 1J7-13411-01 STRAINER, oil **12** 98501-05012 SCREW. Pan head WS13 2H7-13327-00 COVER. PumP Bear **14** 91316-06035 BOLT /15 2H7-13412-00 HOUSING, strainer **16** 91316-06025. BOLT **/**17 93210-18319 O-RING **∕18** 91810-03014 PIN, dowel **19** 91316-06025 BOLT /20 91316-06035 BOLT /21 2H7-13341-00 GEAR, oil PumP idle (37T) /22 90201-12471 WASHER, Plate CIRCLIP /23 93410-12003 /24 4H3-13161-00 PIPE, delivery 1 N/525 90401-10079 BOLT, union N/526 90401-10078 BOLT, union **/**27 90430-10027 GASKET N/528 90401-10080 BOLT. union 3X0332-0060

B<sub>9</sub>

FIG. 6 DIL PUMP

FIG. 6 DIL PUMP REF. NO. PART NO. DESCRIPTION Q'TY REMARKS 29 90430-10027 GASKET 3X0332-0060

5K7332-1070

. FIG. 7 DIL CLEANER

REF NO		DESCRIPTION	Q'TY	REMARKS
1	2H9-13447-00	COVER, oil element	1	
/2	1J7-13440-91	ELEMENT ASSY, oil cleaner	1	
/3	93211-17317	O-RING	1	
1	90501-18433	SPRING, comPression	1	
5	90201-21608	WASHER, Plate	•	,
<b>/</b> 6	1J7-13340-00	BY-PASS VALVE ASSY	1	
17	93210-16314	• O-R I NG	× 1	
V/S8 .	2H7~13417-00	COVER, strainer	1	
1/59	2H7-13317-00	PLATE, baffle	1	
1/510	2H9-13337-00	PLATE, baffle lower	1	
1511	2H7-13371-00	PLATE	t	
/12	92501-06012	SCREW. Pan head	6	
<b>/13</b>	2H7-13414-00	GASKET, strainer cover	1	
<b>/14</b>	91316-06025	BOLT	10	
<b>∕15</b> ,	90340-14009	PLUG, straight screw	1	
16	214-11198-01	GASKET	1	
17	91316-06035	BOLT	4	

BII

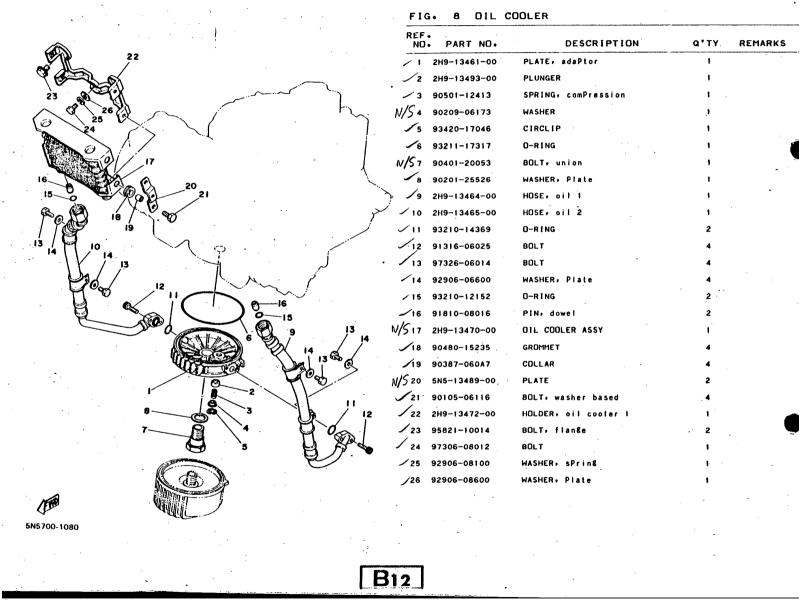


FIG. 9 INTAKE REF. PART NÓ. DESCRIPTION Q'TY REMARKS ✓ 1 2H7-13586-00 JOINT, carburetor 1 /2 2H7-13596-00 JOINT, carburetor 2 **/**3 91316-06020 /4 1J7-13569-00 PLUG, blind CLAMP, hose **5** 90460-54085 N/56 90462-10038 CLAMP N/5 7 90462-10039 CLAMP N/S 8 90467-10039 CLIP 9 3H5-14411-00 CASE, air cleaner 1 10 2H7-1441A-00 COVER, cleaner case 1 /11 2H7-1441E-00 COVER. cleaner case 2 N/512 90183-05004 NUT, spring N/513 2H7-1441F-00 PARTITION, air cleaner case √14 2H7-14457-02 SEAL 15 90179-06250 NUT N/516 2H7-14493-00 STAY 1 N/517 2H7-14498-00 STAY 1 N/S18 2H7-14499-00 STAY 2 N/519 2H7-14484-00 PLATE, cleaner case fitting N/20 2H7-14452-01 SEAL N/S21 90387-060A3 COLLAR **122** 92501-06018 SCREW, Pan head N/523 2H7-14443-00 COLLAR N/524 2H7-14444-00 COLLAR, distance **125** 92502-06070 SCREW, Pan head **26** 92502-06110 SCREW, Pan head /27 2H7-14453-00 JOINT, air cleaner 1 28 2H7-14463-00 JDINT, air cleaner 2 3J6110-0080


B<sub>13</sub>

REF.	PART NO.	DESCRIPTION	. Q'TY	REMARKS
29	2H7-14454-00	TNIOL	1	
<b>/</b> 30	2H7-14434-01	SEPERATOR. 011	1	-
<b>-</b> /31	92901-05600	WASHER, Plate	2	
/32	95302-05700	NUT:	. 2	
15 33	2H7-14431-01	SILENCER. intake 1	1	
/534	2H7-1441G-00	BINDER 1	1	
<b>/</b> S35	2H7-1441H-00	BINDER 2	1	
<b>1</b> 536	98502-05015	SCREW, Pan head	, 2	
	92902-05100	WASHER, spring	2	
/538	90446-09159	HOSE	2	
/39	2H7-14421-01	CASE, air cleaner 2	1	
140	2H7-1442A-00	COVER, cleaner case 3	1	
	2H7-1442E-00	COVER, cleaner case 4	ľ	
•	90183-05004	NUT, spring	4 .	
	2H9-14451-01	ELEMENT, air cleaner	1	
44.	90122-06013	BOLT, wing	2	
_	90122-06012	BOLT, wing	2	
46	90201-06059	WASHER, Plate	4	
	93210-05098	O-RING	2	
5 48 9	90209-05182	WASHER	4	
549 2	2H7-14462-10	SEAL	1	
-	2H7-14422-00	CAP, cleaner case 2	1	
	2H7-11166-00	PIPE, breather 1	1.1	
-	90467-14015	CLIP	2	
	90460-58124	CLAMP. hose	4.	
5 54 9	7301-06015	BOLT	3	
55 8	2902-06600	WASHER	3	


B14

REF. NO. PART NO. DESCRIPTION Q'TY REMARKS N/S 1 5K7-14900-00 CARBURETOR ASSY N/S 2 5K7-14901-00 .CARBURETOR ASSY 1 W/53 5K7-14902-00 .CARBURETOR ASSY 2 W/S4 5K7-14903-00 .CARBURETOR ASSY 3 X 5 5K7-14904-00 .CARBURETOR ASSY 4 6 3111-14147-00 ..O-RING √7 3H1~14962~00 ..WASHER 8 3F7-14134-00 .. SPRING, air adjusting **√9** 3L1-14923-00 .. SCREW. Pilot NS10 3H5-14933-00 .. SPRING. diaPhrasm **/11 97602-03108** .. SCREW. Pan head with washer 12 92901-03100 .. WASHER, spring N/S13 3F7-14936-00 .. SEAT. sPrint N/514 3F7-14589-00 .. SPRING NB15 3F7-14952-00 .. WASHER /16 256-14919-00 ..CLIP N/517 3F7-14918-00 ..RING N/SB 452-14116-30 .. NEEDLE N/S19 5K7-14940-00 .. DIAPHRAGM ASSY N/520 2H9-14931-00 .. SPRING, throttle lever N/31 3H5-14964-00 .. LEVER, throttle 2 N/522 2H7-14952-00 .. WASHER MS23 3H5-14913-00 .. LEVER, throttle N/S24 306-14970-00 .. COLL AR NS25 2H7-14918-00 . . RING N/S26 256-14997-00 ..SEAL ₩27 2H7-14931-00 .. SPRING, throttle lever NS28 2H7-14932-00 .. SPRING, throttle 2 5K7332-1100

FIG. 10 CARBURETOR

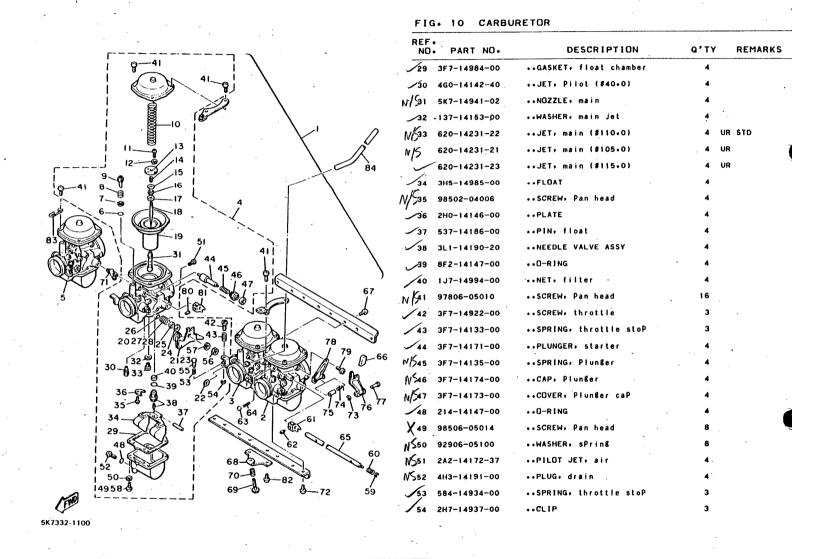

C<sub>2</sub>

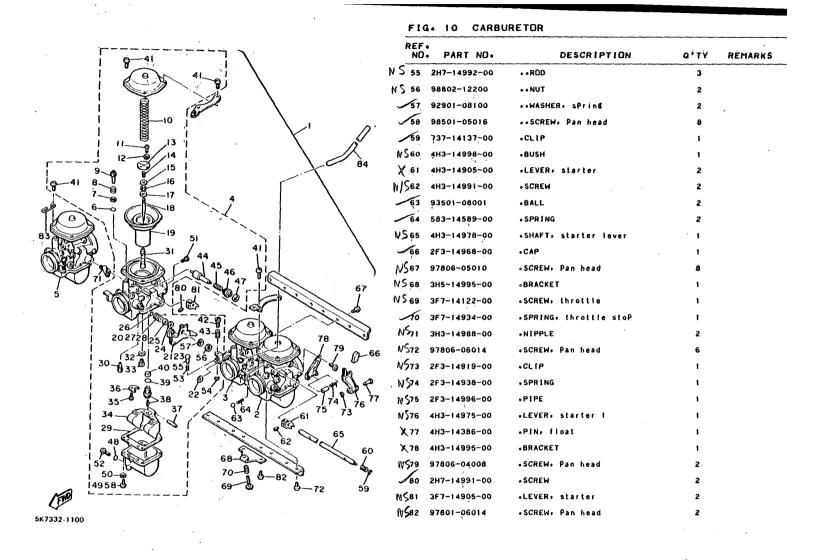


Сз


5K7332-1100

F I	G • 10	CARBU	JRETUR	•		
REF		T NO.		DESCRIPTION	Q'TY	REMARKS
N 5 83	90468-2	20115	CLIP		1	
NS 84	90445-0	17270	unes			

FIG. 11 EXHAUST

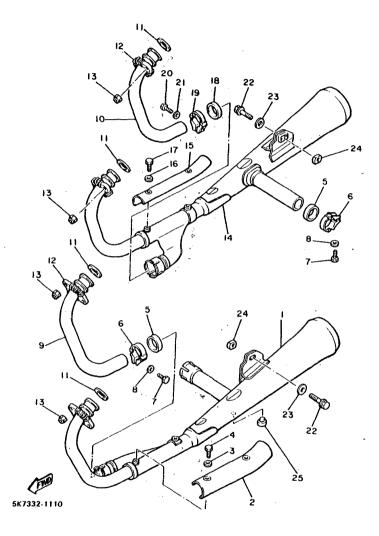


REF. NO. PART N	D. DESCRIPTION	q. <sup>2</sup> TY	REMARKS
5K7-14710-	00 MUFFLER ASSY 1	1	
2 5K7-14718-	OO PROTECTOR, muffler 1	1	
√3 90201-062A	8 WASHER, Plate	2	
97326-0600	8 BOLT	2	
∕5 1L9-14714-	Ol GASKET, muffler	2	
√6 4H3-14715-	OO BAND, muffler	2	
97316-0802	5 BOLT	2	
<b>-8</b> 92906-0860	O WASHER, Plate	2	
9 5K7-14621-	00 PIPE, exhaust 2	1	
10 5K7-14631-	00 PIPE, exhaust 3	1	
11 341-14613-	OO GASKET, exhaust PiPe	4	
∕12 4H3-14612-	00 NUT+rin≰	2	
X13 90179-0834	5. NUT	8	
/14 5K7-14720-	00 MUFFLER ASSY 2	1	
/15 5K7-14728-	OO PROTECTER, muffler 2	1	
/16 90201-062A	8 WASHER, Plate	2	
17 97326-0600	8 BOLT	2	
/18 1L9-14714-	Ol GASKET, muffler	1	
K 19 4H3-14725-	OO BAND, muffler	1	
20 97316-0802	5 BOLT	1	
<b>/</b> 21 92906-0860	O WASHER, Plate	1	
/22 95806-1004	O BOLT, flande	2	
×23 90201-106E	O WASHER+ Plate	2	
24 90179-1027	6 NUT .	. 2	
/25 1A0-27114-	OO STOPPER. main stand.	1	
	_		
**	·	•	

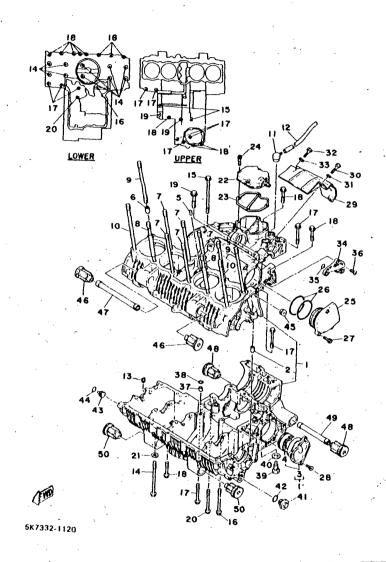


REF NO		DESCRIPTION	Q'TY	REMA	RKŚ
7	ZH9-15100-00	CRANKCASE ASSY	. 1		
/2	91830-22016	·PIN, dowel	2		
/ś	2H7-W1516-00-10	BEARING HOUSING COMP. 2	1	UR marke	d a
N 5	2H7-W1516-00-20	BEARING HOUSING COMP. 2	1	UR marke	d b
14	93304-20505	BEARING (84205)	-1		
/5	93605-14143	PIN, dowel	2		
/6	91830-24016	PIN, dowel	2		
1	90116-10273	BOLT, stud	. 6		
/ 8	2F3-11363-00	BOLT, cylinder holding 3	2		
/9	90116-10275	BOLT, stud	2		
/10	90116-10274	BOLT, stud	2		
/11	4H1-17591-00	BREATHER /	1		
Š12	90445-07039	HOSE	1		
/13	2H7-15138-00	NOZZLE 1 /	3		
14	90105-08205	BOLT, washer based	10		
<b>S15</b>	95816-08125	BOLT, flanke	2		
S16	95816-06085	BOLT. flanse	. 1		
\$17	95816-06065	BOLT, flanse	8		
18	95816-06045	BOLT, flande	11		
19	95816-08045	BOLT, flange	2	,	
20	95816-08075	BOLT, flande	1		
21	90201-08366	WASHER, Plate	8		
22	2H9-11168-00	COVER, breather	1		
23	2H7-11169-00	GASKET, breather cover	ŧ		
24	91316-06025	BOLT	4		
25	2H9-15163-00	HOUSING, bearing 1	1		
26	93210-61362	D-RING	2		
27	91316-06025	BOLT	3	•	

REMARKS

FIG. 12 CRANKCASE

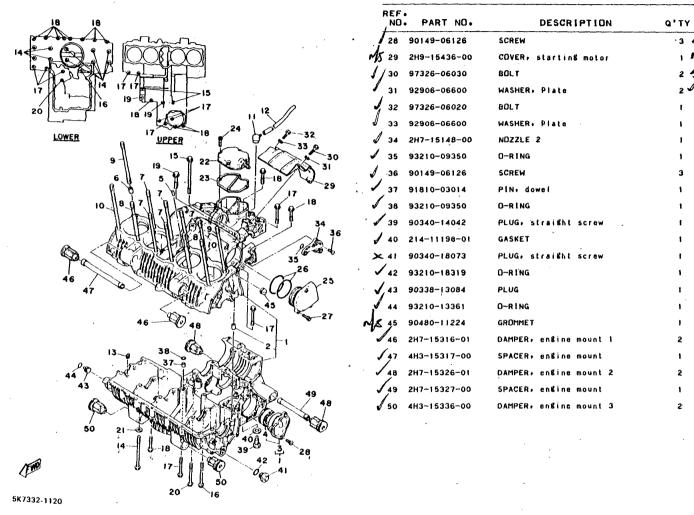

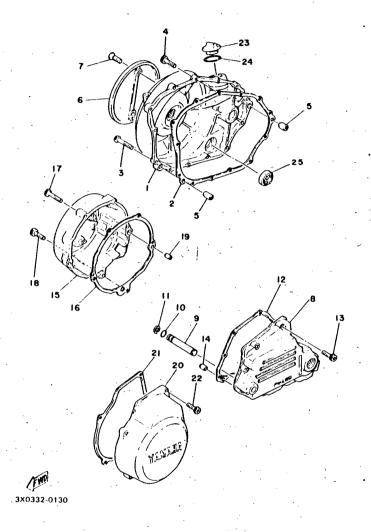

REF		DESCRIPTION	Q'TY	REMARKS
1	2H9-15431-00	COVER, crankcase 3	1	
/2	2H7-15451-00	GASKET, crankcase cover	. 1	
/3	91316-06035	BOLT	3	
/,4	91316-06025	BOLT	10	
/_5	91810-18016	PIN. dowel	2	
6	2H9-15417-00	COVER, clutch	.1	
/1	92606-06018	SCREW, oval head	2	
8	2H9-15411-00	COVER, crankcase 1	1 1	
9	5K7-18188-00	AXLE. Pawi holder	1	
10	93210-09350	O-RING	1	
<u>, 11                                   </u>	93440-12066	CIRCLIP	1	
12	2H7-15461-00	GASKET, crankcase cover 2	1	
13	91316-06025	BOLT	9.	
14	91810-18016	PIN, dowel	2	
15	5K7-15415-00	COVER, Benerator	1	
16	2H7-15455-00	GASKET, Benerator cover	1	
17	91316-06035	BOLT	3	
18	91316-06025	BOLT	2	
19	91810-18016	PIN. dowel	2	
20	5K7-15416-00	COVER, oil PumP	1	
21	2117-15456-00	GASKET, breaker cover	1 .	
22	91316-06025	BOLT	4	
23	2H9-15363-00	PLUG. oil	1	
24	93210-27370	O-RING	1	
25	2H7-15361-00	GAUGE, level	1	

\_C8\_

FIG. 14 A.C.GENERATOR

REF		DESCRIPTION	Q'TY	REMARKS
V,	2H7-81600-10	A.C. GENERATOR ASSY	1	
/2	2H7-81650-10	•ROTOR ASSY	1	
/ 3	2H7-81660-10	FIELD COIL ASSY	1	
. 4	2H7-81610-10	STATOR ASSY	. 1	
5	88101-10108	BOLT	t	
6	92901-10100	WASHER. SPring	1	
7	90201-10508	WASHER, Plate	1	
<b>3</b> 8	91311-06016	BOLT	3	
/9	91316-06030	BOLT	4	




Q'TY

REMARK!

FIG. 15 PICKUP COIL.GOVERNOR REF. NO. PART NO. DESCRIPTION ▶ 1 4R0-81671-10 BASE, PickuP 2 2H7-81676-10 .PULSER COIL ASSY M/S 3 2H7-81677-10 .CLAMP I M& 4 2H7-81678-10 ·CLAMP 2 5 2H7-81679-10 .CLAMP 3 6 2H7-81645-10 SCREW 7 2H7-81646-10 SCREW 2 8 3H5-81683-10 .DIAPHRAGM ASSY 9 2H7-81647-10 .SCREW 3 10 2H7-81675-10 ·WASHER , sPecial 11 4R0-81672-10 PLATE, timing 2 12 4RO-81673-10 ROTOR 13 93604-08071 PIN. dowel 14 91316-08075 BOLT. 15 92501-06030 SCREW. Pan head 16 92901-06100 WASHER, spring 17 90201-06052 WASHER, Plate 18 2H7-81632-01 PLATE, timing 19 92501-06012 SCREW. Pan head 20 92901-06100 WASHER, spring 21 92901-06600 WASHER, Plate 22 90465-08127 CLAMP 23 90465-10164 CLAMP 24 90465-08122 CLAMP 25 90465-10137 CLAMP 26 90465-08135 CL AMP 27 90465-08136 CLAMP 4W1110-1140 C10

Copyright 2008 Yamaha Motor Australia

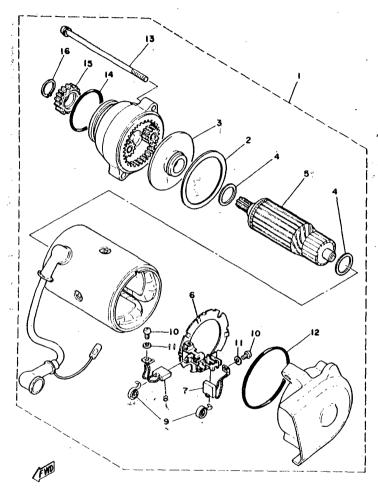

FÍG. 16 STARTING MOTOR

REF		DESCRIPTION	Q'TY	REMARKS
NB 1	5K7-81800-60	STARTING MOTOR ASSY	1	
M5 2	371-81844-20	•GASKET	1	
MB 3	371-81845-20	•PLATE	1	
N/3 4	371-81809-20	·WASHER KIT	1	
NS 5	2H7-81850-60	.ROTOR COMP.	t	
. <b>1</b> €	371-81840-20	BRUSH HOLDER ASSY	1	
1 7	371-81811-20	BRUSH 1	1	
. 🔪 8	371-81812-20	BRUSH 2	1	÷
√ <b>1</b> 6 9	371-81813-20	·SPRING· brush	2	
10	98501-03008	·SCREW· Pan head	2	
<i>&gt;</i> 11	92901-03100	·WASHER » sPring	2	
M/S 12	371-81847-20	•O-RING	ŧ	
13	371-81826-20	•BOLT	2	
1 14	1J7-81847-60	•D-RING	1	
1 15	1J7-15511-00	•GEAR• starting motor (13T)	1	
16	93410-12003	•CIRCLIP	1	

5K7332-1160

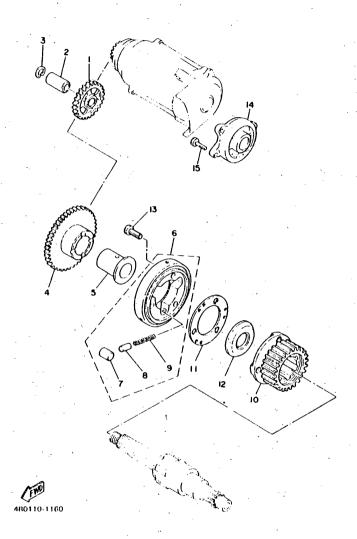


FIG. 17 STAR	TER CLUTCH		
REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
1 2H7-15512-00	GEAR, idler 1 (28T)	1	
AS 2 2H7-15521-00	SHAFT I	ŧ	
3 93420-17046	CIRCLIP	1	
4- 2H7-15517-00	GEAR, idler 2 (47T)	,1	
JS 5 90560-25174	SPACER	1	
M 6 2H7-15580-01	STARTER CLUTCH DUTER ASSY	1	· 1
7 93615-17125	PIN, dowel	3	
8 1J7-15583-01	·CAP· starter clutch spring	3	
9 90501-04503	•SPRING. comPression	3	
10 2H7-11537-00	GEAR, driven (25T)	1	
NS 11 2H7-15589-00	PLATE, clutch cover	1	
B 12 90209-25169	WASHER	1	
13 91316-08018	BOLT	3	•
14 2H7-15654-00	HOLDER, kick Sear	1	•
15 97301-06020	BOLT	3	

REMARKS

REF. NO. PART NO. DESCRIPTION Q'TY 1 2H7-16139-02 CHAIN, Primary 2 2H7-11474-00 GUIDE, upper -3 97301-06015 BOLT 4 2H7-16306-00 CLUTCH DAMPER ASSY AS 5 2H7-16317-00 .CAM, damPer 1 N/5 6 2H7-16315-00 .CAM, damPer 2 ₩\$ 7 2H7-16318-00 .SPRING, damPer 8 2H7-11485-00 . SPACER 93440-25020 .CIRCLIP 10 93306-20432 BEARING **№ 11 93420-47010** CIRCLIP 12 93306-20533 BEARING ¥ 13 90387-443A8 COLLAR 14 90201-36667 WASHER, Plate 15 93420-52014 CIRCLIP 16 90387-253A7 COLLAR 17 2H7-16111-01 GEAR, Primary drive (35T) 18 90208-18025 WASHER, conical spring V 19 90215-19139 WASHER, lock 20 90170-18221 3X0332-0180

FIG. 18 PRIMARY SHAFT.CHAIN

C13

3X0332-0190

NO.		DESCRIPTION	Q'T	1	REM	ARKS
1	2H7-16301-01	CLUTCH ASSY	1		`	
. 2	2H7-16150-01-10	PRI- DRIVEN GEAR COMP. (34/58T)		UR	tyPe	1
	2H7-16150-01-20	.PRI. DRIVEN GEAR COMP.(34/58T)	1	UR	t yPe	2
. з	170-16164-00	.PLATE, thrust 2	, <b>1</b>			
4	2H7-16370-00	CLUTCH BOSS ASSY	1			
5	2H7-16384-00	PLATE, seat	ŧ			,
6	2H7-16383-00	•• SPRING• clutch boss	t			
7	2H7-16324-00	PLATE, clutch 1	1			
8	2H7-16385-00	RING, clutch boss	1			
9	341-16321-13	.PLATE. friction	8			
10	2H7-16325-00	•PLATE + clutch 2	7			
11	2H7-16352-00	·PLATE, Pressure 2	1			
12	90501-23142	•SPRING, compression	6			
13	2H7-W1635-00	.PRESSURE PLATE COMP. 1	. 1			
14	93306-00304	BEARING (86003C4)	1			
15	2H7-16386-00	PIECE, cluth Push	1			
16	95821-06025	.BOLT, flange	6			•
17	2H7-16181-00-10	-SPACER 1	. 1	UR	t y P e	1
	2H7-16181-00-20	SPACER I	1	UR	t y P o	2
18	360-16154-00	PLATE, thrust 1	1			
19	90170-18221	NUT	1			
20	90208-18025	WASHER + conical sPring	1			•
21	90215-19139	WASHER. lock	. 1			•
22	2H7-16396-00	HOUSING. Push screw	1			
23	93606-07082	PIN, dowel	1			
24	2H7-16395-01	RETAINER, ball	1			
25	2H7-16341-00	SCREW, Push	1			
26	2H7-16343-00	SCREW, adjusting	1		•	

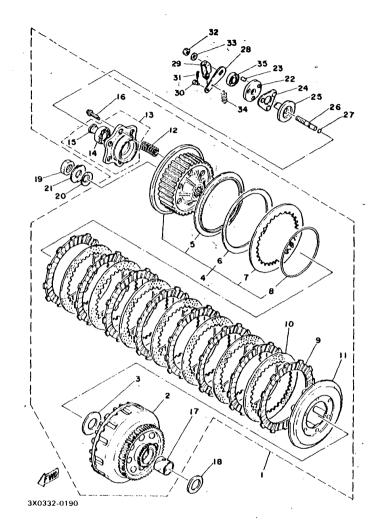


FIG. 19 CLUTCH

REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
27 93210-48364	. O-RING	1	
28 2H7-16342-00	LEVER, Push	1	
29 137-16389-00	JOINT .	t	
30 90240-06005	PIN, clevis	1	
31 91401-10010	PIN, cotter	ŧ	
32 95301-08700	NUT	1	
33 92901-08200	WASHER. Plain	1	
34 90506~10069	SPRING. tension	1	
35 93104-14059	OIL SEAL	t	
			•

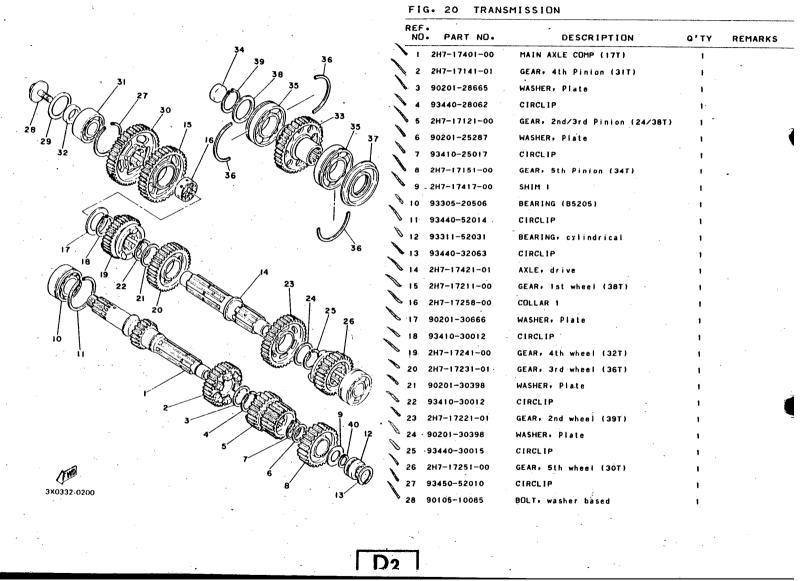


FIG. 20 TRANSMISSION REF. NO. PART NO. DESCRIPTION Q'TY REMARKS 29 90201-252A4 WASHER, Plate 30 5K7-17582-00 GEAR, middle drive 31 93306-20533 BEARING 32 90387-443A8 COLLAR 33 5K7-17583-00 GEAR, middle driven 34 90331-27013 PLUG 35 93306-20705 BEARING (B6207N) 36 93440-72049 CIRCLIP 37 93103-35105 OIL SEAL 38 90201-35668 WASHER, Plate 39 93410-35027 CIRCLIP 40 93410-20009 CIRCLIP 3X0332-0200


D3

FIG. 21 MIDDLE DRIVE GEAR REF. NO. PART NO. DESCRIPTION Q'TY REMARKS 1 2H9-17501-00 MIDDLE GEAR CASE ASSY 2 2H9-17511-00 .HOUSING, middle Bear 3 1J7-17521-YO .HOUSING, bearing 4 93210-68347 .D-RING 5 93306-30520 .BEARING (B6305RB1) 6 90179-24230 • NUT 93306-00608 .BEARING (86006) 90201-08675 .WASHER, Plate 1J7-17531-Y0-10 •SHIM. Pinion (0.10T) .1J7-17531-Y0-15 .SHIM. Pinion (0.15T) 1J7-17531-Y0-30 .SHIM, Pinion (0.30T) 10 91316-08030 .BOLT N 11. 1J7-17537-Y0-15 •SHIM+ thrust (0•15T) I UR 1J7-17537-Y0-30 .SHIM, thrust (0.30T) 1J7-17537-Y0-40 .SHIM, thrust (0.40T) 1J7-17537-Y0-50 .SHIM. thrust (0.50T) 12 1J7-17519-YO .GASKET, housing caP 13 1J7-17538-Y1 .CAP. housing 14 2H7-17551-00 •HOUSING, bearing 15 93210-71360 .D-RING . BEARING 16 93332-00028 17 93332-00024 .BEARING 18 90201-25634 ·WASHER, Plate ¥ 19 2H7-17571-01 ·SPACER, exPansion 20 93101-35085 OIL SEAL 21 1J7-17555-YO .FLANGE, middle Bear 22 90185-14070 .NUT. self-locking 23 90201-14633 ·WASHER, Plate 3X0332-0210 D<sub>4</sub>

21 23 22 REF. NO. PART NO. 24 2H7-17531-00-10

NO	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	2H7-17531-00-10	·SHIM· Pinion (O·10T)	1 U	R
•	2H7-17531-00-15	·SHIM, Pinion (O·15T)	1 U	R
	2H7-17531-00-30	·SHIM, Pinion (O·30T)	ı u	R
25	91311-08030	•BOLT	3	
26	4H1-15189-00	• PLUG	1	
27	214-11198-01	•GASKET		
28	93410-30012	·CIRCLIP	1	
29	91316-08,160	BOLT	1	
30	1J7-17518-00	GASKET, middle Bear case	1	
31	91830-21014	PIN, dowel	1	
32	91316-08035	BOLT	1	
> 33	91316-08065	BOLT	3	
34	91316-08105	BOLT	2	
35	341-23469-00	CAP, boit	. 1	
36	1J7-46181-11	LABEL, oil caution	t	
37	90201-08675	WASHER, Plate	6	

FIG. 21 MIDDLE DRIVE GEAR

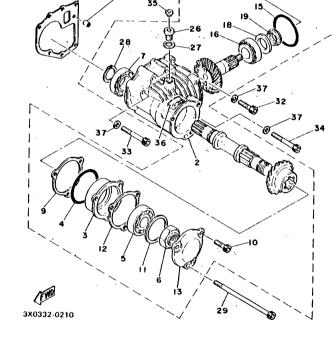

D<sub>5</sub>


3X0332-0220

FIG. 22 SHIFT CAM.FORK

REF. NO. PART	NO •	DESCRIPTI	ON	Q'TY	REMARKS
1 2H7-1854	0-00 SHIFT	CAM ASSY		1	
2 93604-18	1058 •PIN,	dowel		4	
3 93603-10	049 •PIN•	dowel		2	
4 2H7-1856	1-00 •PLAT	E, side 1		,1	
4 2H7-1856 5 2H7-1856	6-00 +PLAT	E, side 2		1	
	140 •WASH	ER. lock	•	1	
6 90215-05 7 97318-05	020 •BOLT	•		1	
8 93315-23	1612 BEAR	ING, cylindric	a l	1	
9 93440-34	025 •CIRC	LIĖ		1	
10 93604-08	1071 •PIN•	dowel		1	
11 2J2-1814	1-00 PLATE	• stoPPer		1.	
12 93410-30	012 CIRCL	IP .		1	
13 1J7-1854	7-00 STOPP	ER, cam		-1	
14 90501-10	196 SPRIN	G. comPression		1	
	117 SCREW	-	•	1	
16 90215-15	141 WASHE	R. Fock	•	1	
17 93608-52	138 PIN+	dowel		1	
18 2H7-1553	11-00 PLATE	• stopper	•	1	
19 97301-06	015 BOLT			1	
20 90215-06	040 WASHE	R. lock		, 1	
21 2H7-1851	1-00 FORK.	shift 1		1	
22 2H7-1851	2-00 FORK,	shift 2		1	
23 2H7-1851	3-00 FORK+	shift 3		. 1	
24 2H7-1853	11-01 BAR	shift fork Bui	de 1	1 .	
25 93410-12	003 CIRCL	IP		1	
26 2H7-1812	2-00 LEVER	shift 2		1	
27 90508-10	362 SPRIN	G. torsion		1	
/ 28 2H7-1815	1-00 LEVER	shift 3		1	

FIG. 22 SHIFT CAM.FORK

REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
29 93440-08001	CIRCLIP	1	
<b>/</b> 30 93410-12003	CIRCLIP	1	

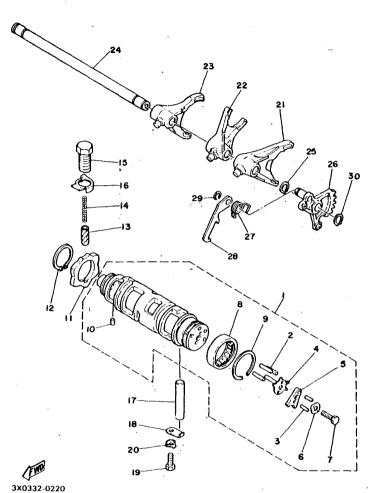

D7

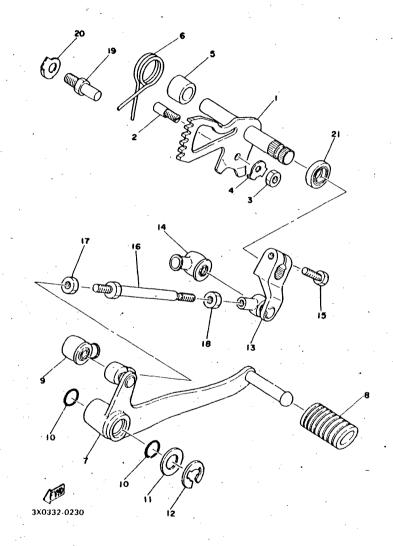


FIG. 23 SHIFT SHAFT.PEDAL

REF. ND., PART NO.	DESCRIPTION	. Q'TY	REMARKS
( 1 4H3-18101-00	SHIFT SHAFT ASSY	1	
2 90149-06017	SCREW	1	
3 95301-06600	NUT	1.	
4 90215-06016	WASHER, lock	1	
5 90560-11026	SPACER	1	
6 90508-29361	SPRING, torsion	1	
7 5K7-18111-00	PEDAL, shift	4	•
8 132-18113-01	COVER, shift Pedal	1	
/ 9 2H9-18154-00	COVER, dust	1	
10 93210-12327	O-RING	. 2	
11 90201-124E4	WASHER, Plate	` 1	
12 93430-16034	CIRCLIP	· 1	
13 5K7-18112-00	ARM, shift	1	
14 2H9-18154-00	COVER, dust	1	
15 97306-06020	BOLT	1	
16 5K7-18115-00	ROD, shift		
17 90170-06289	NUT	1	. '
18 95306-06700	NUT	1	
19 90109-08441	BOLT	1	
20 90215-08115	WASHER+ Lock	1	
21 93102-12106	OIL SEAL	1	

5K7332-1240

FIG. 24 FRAME

REF .		DESCRIPTION	Q'TY	REMARKS
71	5K7-21110-00-33	FRAME COMP	1	yamaha black
/ 2	4H3-21315-00	STAY, engine 2	1	
<b>/3</b>	4H3-21316-00	STAY, engine 3	1	
/4	2H9-2136H-00	STAY, oil cooler	2	
/5	4H3-21481-00	BOLT, endine mounting 1	4	
∕ 6	4H3-21293-00	NUT	4	
-		BOLT. endine mounting 2	1	
v/\$8	92906-10100	WASHER, spring	1	
/9	4H3-214B3-00	BOLT, engine mounting 3	2	
<b>/10</b>	90179-10321	NUT	3.	
/11	4H3-21484-00	BOLT: engine mounting 4	1	
ر 12	90179-12323	NUT	1	
/13	4R0-21308-00	HELMET HANGER ASSY	1	
1/514	92506-06012	SCREW, Pan head	2	
	92906-06100	WASHER, spring	2	
<b>/</b> 16	5K7-21165-00	HANDLE, standing	2	
/17	97313-06012	BOLT	2	
1518	92903-06100	WASHER, spring	2	
/519	3H3-2139R-00	COVER 2	1	
1/520	4R0-2139T-00	BRACKET, cover	t	
χ 21	3H3-2139U-00	DAMPER 2	2	
/22	98506-05012	SCREW, Pan head	2	
/ 23	92906-05200	WASHER. Plain	2	•
/24	3J6-2134Y-01	STAY, horn	1	
525	97306-08014	BOLT	2.	
/26	92906-08100	WASHER. SPring	2	
<b>( 27</b>	5K7-2115F-00	MEMBER	1	•
/28	90105-08141	BOLT, washer based	4	

		•		
REF NO		DESCRIPTION	Q'TY	REMARKS
/ 29	92906-08200	WASHER, Plain	4	
N/530	5K7-2117F-00	COVER -	2	
N/S31	95806-06010	BOLT, flande	2	

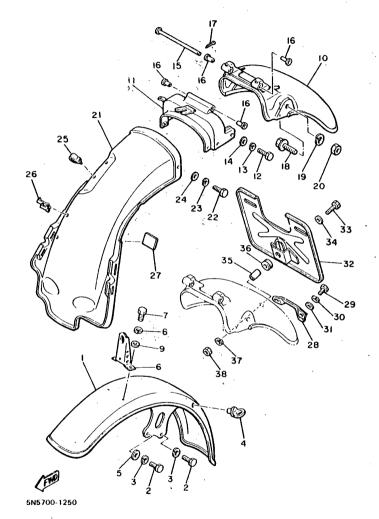


FIG. 25 FRONT FENDER. REAR FENDER

REF .		DESCRIPTION	Q'TY	REMARKS
<i>7</i> ,	5N5-21510-00-5R	FRONT FENDER COMP.	1 UR	chrome-Plat-
N/S	5K7-21510-00-5R	FRONT FENDER COMP.	1 UR	chrome-Plat-
V/S2	97326-08020	BOLT	4	(DIACK)
/3	92906-06100	WASHER. spring	4	
/4	140-21518-00	HOLDER, cable	1	
1/55	90201-08100	WASHER. Plate	.2	
N/56	5N5-21581-00	STAY, Plate fitting 1	· t	
M/57	97306-06012	BOLT	2	
/8	92906-06100	WASHER. spring	2	
/9	92906-06600	WASHER, Plate	2	
/10	5K7-21610-00-5R	REAR FENDER COMP.		rome—Plated
/11	3H5-21613-00	FENDER, rear 2	i	1 ack /
/12	97326-06014	BOLT	4	
/13	92906-06100	WASHER, spring	4	
/14	92906-06600	WASHER, Plate	4	
/ 15	91701-06152	PIN, clevis	1	•
/ 16	1J7-21626-00	COLLAR, rear fender	4	
5 17	91401-16012	PIN, cotter	1	
/ 18	95821-10020	BOLT, flande	. 2	•
/ 19	92903-10100	WASHER, sPring	2	
/ 20	90176-10013	NUT, crown	. 2	
15 21	3H3-21629-00	GUARD, mud	1	
522	97306-06012	BOLT	2	
/ 23	92906-06100	WASHER. spring	2	
/24	90201-06248	WASHER, Plate	2	
/ 25	90464-12027	CLAMP	2	
<b>/ 26</b>	90464-16021	CLAMP	3	
15 27	2H7-21628-00	DAMPER, mud guard		

Dii

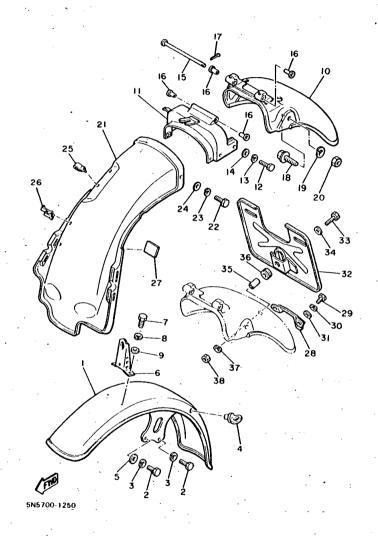


FIG. 25 FRONT FENDER REAR FENDER

REF.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	T5-21641-00	BRACKET+ reflector	1	
29 9	97306-06010	BOLT	2	
30 9	92906-06100	WASHER. sPring	2	
31 9	92906-06600	WASHER, Plate	<b>,2</b>	
532 3	3Y8-85152-00	BRACKET 3	1	
/33 9	97301-06025	BOLT	1	
/34 9	90201-06067	WASHER, Plate	1	
/35 9	90387-07390	COLLAR	1	٠
∕36 <b>9</b>	90480-14102	GROMMET	1	
× 37 9	2901-06100	WASHER. sPring	t	
∕38 S	95301-06600	NUT	1	

5K7332-1260

FIG. 26 SIDE COVER. TOOL

REF.		DESCRIPTION	Q'TY	REMARKS
/1	4H3-21711-00-6G	COVER, side 1	1	new yamaha bia-
· / 2	3J6-28185-00	LID	1	ck
√3	3X0-21783-01	EMBLEM 3 1-1 BADGE	1	
14	4H3-21721-00-6G	COVER, side 2	1	new yamaha bla-
∕5	3X0-21783-01	EMBLEM 3 1-1 BADGE	1	ck
<b>/6</b>	90480-12261-	GROMMET	2	
17	90480-12053	GRÖMMET	2	
18	90480-01141	GROMMET	1	
χ <sup>9</sup>	4W1-21708-00	SIDE COVER LOCK ASSY	1	
/10	92506-06014	SCREW, Pan head	2	
/11	92906-06100	WASHER, spring	2	
/12	92906-06600	WASHER, Plate	2	
15 13	2H7-21170-00-33	BOX COMP.	1	yamaha black
VS 14	2H7-21746-00	DAMPER, battery box	4	
NS 15	90387-06387	COLLAR	2	
NS 16	90209-07170	WASHER	2	
/17	97301-06030	BOLT	2	
<b>/18</b>	92901-06100	WASHER. sPring	2	
NS19	2H7-21747-00	DAMPER	2	
NS20	2H7-21543-00-91	PLATE 1	1	uni chrome
/21	92501-06012	SCREW. Pan head	3	
/22	92901-06100	WASHER, spring	3	
/23	92901-06600	WASHER, Plate	3	
<b>/24</b>	2H7-21171-01	BOX+ tool	1	
<b>_</b> 25	92501-06012	SCREW, Pan head	1	
26	92901-06100	WASHER. spring	1	
<b></b>	90201-06052	WASHER. Plate	1	
15 28	90480-16185	GROMMET	1	


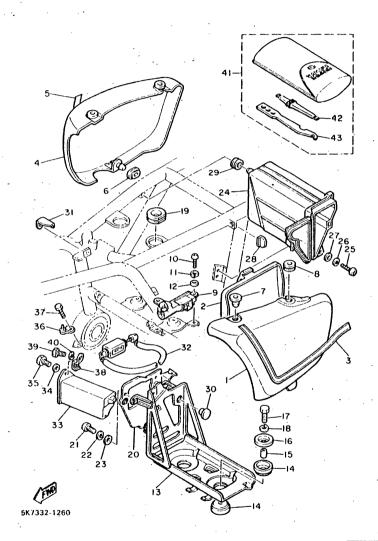


FIG. 26 SIDE COVER. TOOL

REF NO		DESCRIPTION	Q'TY	REMARKS
Z 29	90480-15058	GROMMET	1	
<b>~</b> 30	90480-17218	GROMMET	1	
1531	2H7-21715-00	WASHER, special 1	1	
/32	4R0-W2171-00	WHEEL LOCK ASSY	1	
15 33	4R0-21258-00	вох	1	
/ 34	90201-06248	-WASHER, Plate	1	
r\$ 35	92506-06016	SCREW. Pan head	. 1	
1536	4R0-2175H-01	STAY. lock	1	
<b>/ 37</b>	91316-06012	BOLT	1	•
/38	4R0-2172E-00	STAY, side cover 1	1	
ß 39	97306-06012	BOLT	1	
/40	92906-06100	WASHER, spring	1	
<b>41</b>	3Н3-28100-10	TOOL KIT	1	
42	2H7-2815A-00	•GAUGE• oil level	1	
/ 43	3H3-2814A-00	•TOOL, wire	1	
				•
		and the second s		

FIG. 27 REAR ARM. SUSPENSION

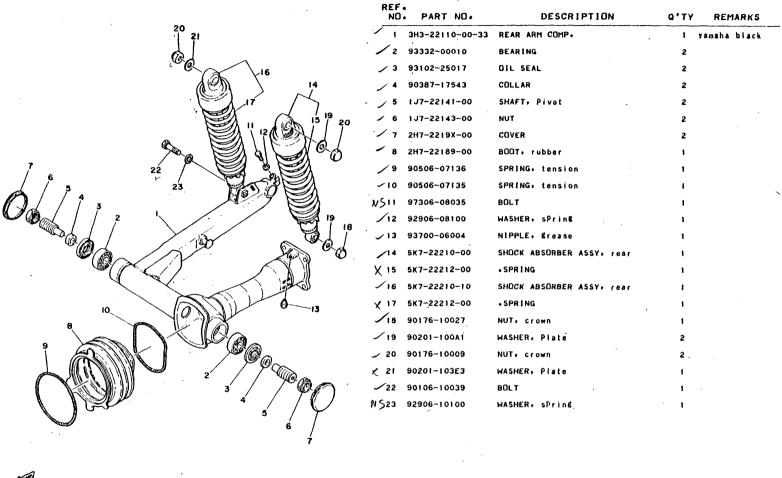

3X0332-0270



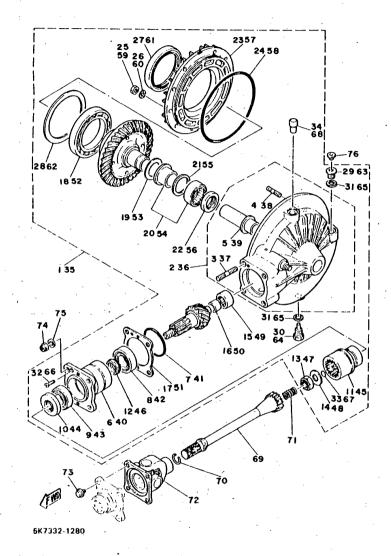


FIG. 28 DRIVE SHAFT

REF .		DESCRIPTION	Q'TY	REMARKS
V5 1	5K7-46101-00	REAR AXLE GEAR CASE ASSY	1 UF	1
V \$ 2	5K7-46150-00	DRIVE SHAFT HOUSING COMP.	1	
Χз	90116-10359	BOLT, stud	4	
/4	90116-08360	BOLT, stud	10	ŕ
<b>/</b> 5	1J7-46153-Y0	COLLAR, Suide	1	
<b>/</b> 6	2H7-46124-01	·HOUSING, bearing	1	
/7	93210-58346	+D-RING	1 .	. •
/ 8	93332-00027	•BEARING	1	
/ 9	93332-00023	• BE AR I NG	1	
/10	93101-38086	•OIL SEAL	1	
- 11	2H7-46123-00	• COUPLING • Bear	1	
12	1J7-46129-Y1	•SPACER• exPansion	1	
13	90185-14070	•NUT - self-locking	1	
/14	90201-14664	·WASHER, Plate	1 .	
15	93317-41510	·BEARING· cylindrical		•
16	2H7-46122-00	•RACE• inner	1	
/17	1J7-46127-Y0-30	-SHIM (0-30T)	1 UR	
<i>y</i>	1J7-46127-Y0-35	•SHIM (0•35T)	1 UR	
,	1J7-46127-Y0-40	-SHIM (0-40T)	. 1 UR	
/	1J7-46127-Y0-45	•SHIM (0•45T)	1 UR	
	1J7-46127-Y0-50	+SHIM_(0+50T)	1 UR	
∕18 °	93316-01403	·BEARING· cylindrical	1	ã
19	1J7-46119-Y0-10	·SHIM, thrust (0·1T)	1 UR	•
<i>)</i> .	1J7-46119-Y0-20	·SHIM· thrust (0·2T)	1 ÚR	
20	1J7-46106-NO	•BEARING ASSY	t·	•
<b>2</b> 1	1J7-46118-Y0-18	.WASHER, thrust (1.8T)	1 UR	*
_	1J7-46118-Y0-19	.WASHER. thrust (1.9T)	1 UR	
, .	IJ7-46118-Y0-20	·WASHER, thrust (2.01)	† UR	_

FIG. 28 DRIVE SHAFT

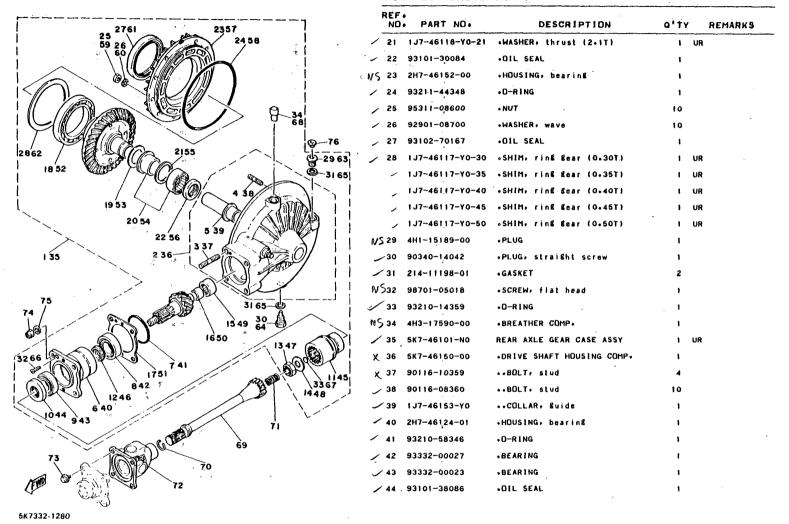

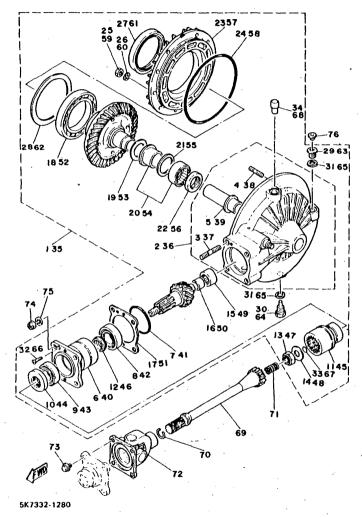

REF.	PART NO.	DESCRIPTION	Q'TY	REMARKS
45 2	H7-46123-00	·COUPLING, Bear	1	
46 1	J7-46129-Y1	·SPACER, exPansion	1	
47 9	0185-14070	NUT, self-locking	1	
46 9	0201-14664	·WASHER · Plate	1	
<b>49</b> 9	3317-41510	·BEARING , cylindrical	1	
50 2	H7-46122-00	.RACE, inner	t	
51 1	J7-46127-Y0-30	•SHIM (0.30T)	1 UF	٠ .
/ 1	J7-46127-Y0-35	•SHIM (0.35T)	1 UF	•
<b>~</b> 1	J7-46127-Y0-40	•SHIM (0•40T)	1 UF	t
1	J7-46127-Y0-45	+SHIM (0.45T)	I UR	t <u>.</u>
<b>/</b> 1	J7-46127-Y0-50	•SHIM (0.50T)	1 UR	t ·
52 <del>9</del>	3316-01403	·BEARING, cylindrical	1	
53 1	J7-46119-Y0-10	·SHIM· thrust (0·1T)	1 UR	!
/!	J7-46119-Y0-20	.SHIM, thrust (0.2T)	1 UR	
<b>(54</b> 1	J7-46106-N0	BEARING ASSY	. 1	
<b>/55</b> 1	J7-46118-Y0-18	·WASHER· thrust (1.8T)	1 UR	ı
ノ 1	J7-46118-Y0-19	•WASHER + thrust (1.9T)	1 UR	•
1	J7-46118-Y0-20	·WASHER, thrust (2.01)	1 UR	r <sup>*</sup> . '
/ 1	J7-46118-Y0-21	·WASHER · thrust (2.11)	1 UF	ł

.HOUSING, bearing

1 UR

·WASHER · wave

.DIL SEAL 1J7-46117-Y0-30 .SHIM, ring Bear (0.30T) 1J7-46117-Y0-35 .SHIM, ring Bear (0.35T)

1J7-46117-Y0-40 •SHIM, ring gear (0.40T)

• NUT

2H7-46152-00

93211~44348 95311-08600

92901~08700

93102-70167

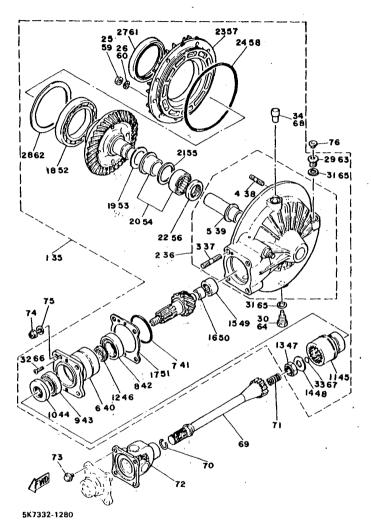


FIG. 28 DRIVE SHAFT

REF.		DESCRIPTION	Q'TY	REMARKS
<b>62</b>	1J7-46117-Y0-45	-SHIM. rink Bear (0-45T)	1 0	R
/	1J7-46117-Y0-50	-SHIM- ring fear (0-50T)	1 0	R
5 63	4H1-15189-00	•PLUG	1	
64	90340-14042	.PLUG. straight screw	1,	
65	214-11198-01	•GASKET	2	
\$ 66	98701-05018	SCREW, flat head	1	
67	93210-14359	• D-R I NG	1	
S 68	4H3-17590-00	BREATHER COMP.	1	
<b>69</b>	2H7-46172-00	SHAFT, drive	1	
70	90468-12088	CLIP	1	
71	90501-16491	SPRING, compression	1	
/ 72	2H7-46180-00	CROSS JOINT COMP.	1	
<b>73</b>	90105-08066	BOLT, washer based	4	
1574	95616-10100	NUT+ u	4	
575	92906-10100	WASHER. spring	4	
<b>/</b> 76	341-23469-00	CAP. bolt	1	

E5

5K7332-1290

FIG. 29 FRONT FORK


REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
NS 1 5K7-23102-00	FRONT FORK ASSY (L.H)	1	
2 4W1-23126-00	•TUBE, outer 1	-1	
<b>3</b> 3J3-23156-00	CLIP, oil seal	1	
✓4 3J6-23146-00	WASHER, oil seal	· .1	
✓ 5 3J6-23145-00	OIL SEAL	. 1	
/ 6 4H3-23119-00	••PLUG• drain	1	· 🖟
7 5K7-23110-00	.INNER TUBE COMP.1	1	
8 5K7-23141-00	·SPRING· front fork	11	
✓ 9 5K7-23170-00	.CYLINDER COMP., front fork	. 1	
/10 3H3-23144-00	. •SEAL, dust		
/11 2F3-23157-00	•PISTON RING, front fork	1	
/12 1J3-23151-00	·SPRING, rebound	1	
/ 13 3H3-23135-00	•METAL • slide 2	, 1	
√ 14 1J3-23166-00	·PIECE, oil lock	1	
_15 3M7-23181-00	BOLT, hexagon socket head	1	
/16 4H3-23111-00	BOLT, caP	1	,
/17 3H3-23114-00	•GASKET	1	
/18 5K7-23184-00	-CAP, air valve	.1	
/19 5K7-23190-00	AIR VALVE COMP.	1	
20 3H3-23147-00	•O-RING	1	
21 3H3-23163-00	• GASKET	1.	
\$ 22 5K7-23103-00	FRONT FORK ASSY (R.H)-	1	Ã
\$ 23 4W1-23136-00	·TUBE, outer 2	1	•
24 3J3-23156-00	CLIP, oil seal	1	
25 3J6-23146-00	••WASHER• oil seal	1	
26 3J6-23145-00	DIL SEAL	1	
/ 27 4H3-23119-00	••PLUG• drain		
/28 5K7-23110-00	.INNER TUBE COMP.1	1	

FIG. 29 FRONT FORK

48	. REF		DESCRIPTION	Q'TY	Y REMARKS
16 20	/29	5K7-23141-00	SPRING, front fork	1	
3/ 41 19 18 (   41 40 18 (   40 39	/ 30	5x7-23170-00	•CYLINDER COMP•• front fork	ł	
51	/31	3H3-23144-00	«SEAL» dust	1	
	/ 32	2F3-23157-00	·PISTON RING, front fork	1	
47	/33	1J3-23151-00	·SPRING, rebound	1	
47 / 21 45 65	<b>/</b> 34	3H3-23135-00	•METAL• slide 2	1	•
31/	<b>∕</b> 35	1J3-23166-00	·PIECE, oil lock	1	
54	<b>/</b> 36	3M7-23181-00	BOLT, hexagon socket head	1	
49 50	/37	4H3-23111-00	·BOLT· caP	f	
46	/38	3H3-23114-00	•GASKET	1	
	/39	5K7-23184-00	•CAP• air valve	1	
	./40	5K7-23190-00	.AIR VALVE COMP.	1	
28	141	3H3-23147-00	•O-RING	1	
52 53 53 53 54	142	4H3-23128-00	•BOLT• axle holder	1	
$\begin{array}{c c}  & 52 \\  & 53 \\  & 68 \\  & 35 \end{array}$	/43	3J3-23159-00	.WASHER, spring, lower	1	
	144	4H3-23127-00	.NUT, outer tube	1	
22 ) @ [ 525/	145	3H3-23163-00	• GASKET	ı	
/ / 42/ 6/ / 9 / 7 26/	<b>/</b> 46	5K7-23340-00-90	UNDER BRACKET COMP.	1	uni chrome (b)— ack)
$\frac{42}{6}$	147	5K7-23121-00-5R	.COVER. uPPer 1	1	chrome—Plated (black)
	<b>✓ 48</b>	5K7-23131-00-5R	COVER. upper 2	1	
	<b>/</b> 49	5K7-23122-00-5R	COVER, outer 1	i	chrome-Plated
	<b>/</b> 50	5K7-23132-00-5R	COVER, outer 2	1	chrome-Plated (black)
$\begin{array}{c c} & & & & \\ & & & & \\ & & & & \\ & & & & $	<b>/</b> 51	4H3-23115-00	GUIDE, cover upper	2	101001
12 / 33/ /	<b>/</b> 52	3J3-23159-00	WASHER, spring, lower	4	•
	NS 53	3J3-23346-00	BOLT 1	4	
43 (15)	<b>/54</b>	5K7-23116-00	GUIDE, cover lower	2	

E<sub>7</sub>

5K7332-1290

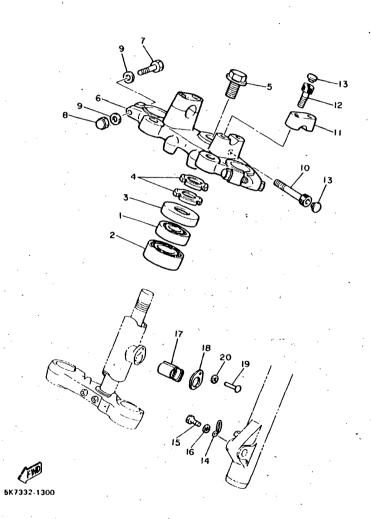


REF.	PART NO.	DESCRIPTION	Q'TY	REMARKS
	93332-00023	BEARING	1	· ·
			'	
/ 2 9	93332-00008	BEARING	1	
VS 3 4	4H3-23415-00	COVER. ball race 1	1	
~ 4. 4	4H3-23454-00	NUT, fitting 2	2	•
<b>/</b> 5 \$	90105-14102	BOLT, washer based	1	
<b>/</b> 6 :	3H3-23435-00-98	'CROWN+ handle'	1	low floss bi
/7 9	97326-08055	BOLT	2	,,
<b>√8</b> 9	95306-08800	NUT	2	•
·/ 9 9	92906-08600	WASHER, Plate	4	
/10 s	91316-08040	BOLT	1	
/11 3	360-23441-01-98	HOLDER, handle upper	2	low Bloss black
/12 9	91316-08030	BOLT	4	
<b>/13</b> 3	341-23469-00	CAP, bolt	. 5	
/14 4	4H3-23318-00	HOLDER, cable 1	1	
1515 5	97306-06012	BOLT	1	
∕.16 S	92906-06100	WASHER, sPring	1	
17	•	BODY & KEY, steering lock	1	LM
/18 1	134-23484-10	CAP+ handle lock	1	
<b>/</b> 19 9	90269-04003	RIVET	1	
/20 S	30208-04029	WASHER, conical spring	ŧ	•

FIG. 31 FUEL TANK

	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	3H3-24110-00-6G	FUEL TANK COMP.	ı	new yamaha bia-
/ 2	90249-03123	PIN	1	ck
/ 3	93430-02001	CIRCLIP	1	
- 4	1J7-24181-01	DAMPER, locating 1	2	
_ 5	2H7-24182-00	DAMPER, locating 2	1	
6	90201-08310	WASHER. Plate	1	
1	97301-08012	BOLT	1	
<i>-</i> 8	1J7-24183-02	DAMPER, locating 3	2	
<b>/</b> 9	4R0-24602-00	CAP ASSY	1	
<b>/</b> 10	2M0-24641-00	•GASKET• caP 1	1	
<b>/</b> 11	98501-05008	SCREW, Pan head	1	
/12	92901-05100	WASHER, spring	1	
/ 13	3J6-24161-00	EMBLEM 1	1	
14 ر	90152-04006	SCREW, countersunk	2	
/15	3J6-24162-00	-EMBLEM 2	1	
/ 16	90152-04006	SCREW, countersunk	2	
- 17	2H7-24189-00	MOLD, fuel tank	1	
518	90468-03107	CLIP	<b>5</b> ,	

4RO110-1300

E9

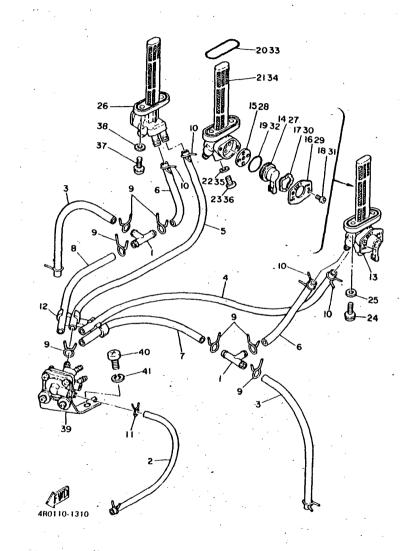

REF NO		DESCRIPTION	Q'TY	REMARKS
NS I	3H3-24376-00	PIPE, Joint 1	2	
/ 2	90445-07219	HOSE	1	
٧۶э	90445-10345	HDSE	2	
X 4	3H3-24311-00	PIPE, fuel 1	.1	
X 5	3H3-24312-00	PIPE 2	1	
X 6	3H3-24313-00	PIPE 3	2	
X 7	3H3-24314-00	PIPE 4	1	`
χв	3H3-24315-00	PIPE 5	1	
<b>/</b> 9	90467-09006	CLIP	12	
V510	90467-10039	CLIP	4	
/11	90467-07029	CLIP	2	
W\$12	3H3-24366-00	CLAMP, fuel PiPe 1	1	
<b>/</b> 13	4H3-24500-01	FUEL COCK ASSY 1	1 *	
1514	4H3-24524-00	·LEVER· cock	٠ 1	
/15	3H3-24523-00	· VALVE	1 .	
NS16	4H3-24525-00	.PLATE, lever fitting	1	
V 517	3H3-24518-00	·WASHER, wave	1	
15.18	98506-03008	•SCREW• Pan head	2	,
/19	3H3-24534-00	• O-R I NG	1	
5 20	3H3-24512-00	•O-RING, fuel cock	1	
<b>/</b> 21	371-24514-20	•NET• filter 1	1	
/ 22	3H3-24522-00	• GASKET	2 .	4
<b>/</b> 23	98501-05008	•SCREW• Pan head	2	
24	90157-06018	SCREW. Pan head	2	
25	90202-06010	WASHER, Plate	2	
<b>26</b>	4H3-24510-01	FUEL COCK ASSY 2	1	
5 27	4H3-24524-10	·LEVER· cock	1	
28	3H3-24523-00	· VALVE	1	


Copyright 2008 Yamaha Motor Australia

4R0110-1310

FIG. 32 FUEL COCK. PIPING


REF		DESCRIPTION	Q'TY	REMARKS
X 29	4H3-24525-10	·PLATE, lever fitting	1	
V/S30	3H3-24518-00	.WASHER, wave	1	
v S 31	98506-03008	·SCREW, Pan head	2	
/32	3H3-24534-00	• D-R I NG	1	
NS33	3H3-24512-00	•O-RING, fuel cock	1	
/34	371-24514-20	•NET• filter 1	1	
/35	3H3-24522-00	•GASKET	2	
/36	98501-05008	•SCREW• Pan head	2	
× 37	90157-06018	SCREW, Pan head	2	
<b>_</b> 38	90202-06010	WASHER, Plate	2	
/39	3H3-24520-01	DIAPHRAGM ASSY	1	
NS40	92501-08015	SCREW. Pan head	1	
<b>/41</b>	92901-08100	WASHER. spring	1	

En

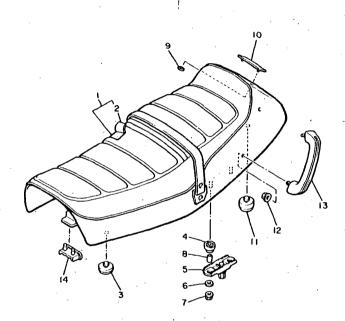

REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
1 5K7-W2472-10	DOUBLE SEAT ASSY	1	
2 5K7-24731-00	·COVER, double seat	,	
3 1L9-24741-00	PAD, seat	4	
S 4 2H7-24723-00	DAMPER, seat	.4	
5 5 2H7-24738-00	BRACKET, seat	2	<b>*</b>
156 90201-06008	WASHER, Plate	4	
7 95702-06100	NUT, flanse	6	
<b>8</b> 90387-06553	COLLAR	4	
9 90183-04012	NUT+ sPring	2	
10 2H7-24786-02	EMBLEM	į	
/11 174-24741-00	PAD, seat	2	
12 95702-08100	NUT, flande	4	
13 5K7-24773-00	HANDLE, seat	2	
/14 2H7-24724-00	DAMPER, seat	1	

5K7332-1330

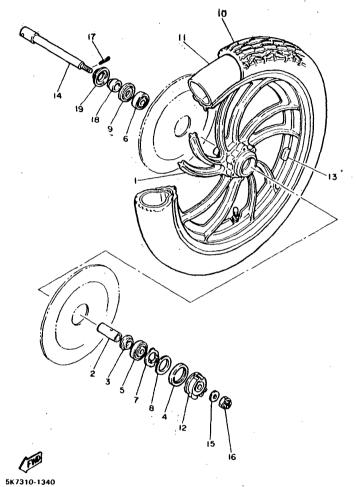

REF.	PART NO.	DESCRIPTION	q'ty	REMARKS
VS!	5K7-25168-00-8L	CAST WHEEL, front	i ur	nebular Kold
	5K7-25168-20-8L	CAST WHEEL, front	1 Ui	R nebular Bold
/2	90560~17126	SPACER	1	
<b>-</b> 3	141-25115-00	FLANGE, sPacer 1	1	
14	93105~45017	OIL SEAL	١.	
<b>~</b> 5	93306-30309	BEARING (B6303ZZ)	1	
<b>/</b> 6	93306-30303	BEARING (B6303Z)	1	
ノフ	341-25149-00	CLUTCH, meter	1	
_ 8	341-25846-00	RETAINER. clutch	1	
<b>/</b> 9	93102-28022	OIL SEAL	1	•
X 10	94135-19597	TIRE (3.50-19)	1	
/ 11	94232-19122	TUBE (3.25-19)	1	
12	2G2-25190-00	GEAR UNIT ASSY	t	
<b>/</b> 13	141-25398-01	BALANCER, wheel (20G)	1 UN	
_	141-25399-00	BALANCER, wheel (10G)	I ÜN	ı
/	2M0-25399-00	BALANCER, wheel (30G)	1 UN	ı
<b>/14</b>	341-25181-01	AXLE, wheel	1	
/ 15	92901-14200	WASHER, Plain		•
۱۶ ا ۶	90171-14006	NUT, castle	1	
17	91401-30030	PIN, cotter .	t	
/18	90387-17433	COLLAR	t	
<b>~</b> 19	341-25118-00	COVER, hub dust	t	

E13

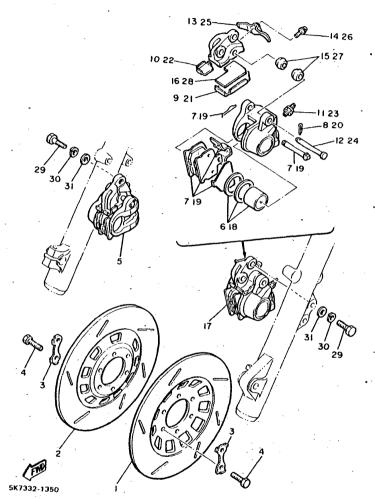



FIG. 35 FRON	T BRAKE CALIPER	
REF. NO. PART NO.	DESCRIPTION	Q'TY REMARKS
√ 1 4H3-25831-10	DISC, brake	1 ,
- 2 4H3-25831-00	DISC, brake	1
3 1J3-25834-01	WASHER, lock	6
<b>✓</b> 4 90101-08312	BOLT	12
5 4W1-25810-00	CALIPER ASSY (RIGHT)	1
6 4W1-W0057-00	.PISTON ASSY, caliPer	1
7 4W1-W0045-00	BRAKE PAD KIT, front	1
8 91490-20015	.PIN, cotter	1
9 4W1-25913-00	·RETAINER	1
10 4W1-25828-00	•SHIM• caliPer	1
/11 1J3-W0048-00	BREED SCREW KIT	1
/12 4W1-25914-00	·PIN· stide	1
/\$13 4W1-25836-00	•COVER• dust	1
\$14 4L3-25818-00	·BOLT· caliPer	1
V\$15 4L0-25917-00	BOOT, califer	2
/ 16 4W1-25828-50	·SHIM, caliPer	1 UN
/17 4W1-25810-10	CALIPER ASSY (LEFT)	1
18 4W1-W0057-00	·PISTON ASSY, califer	1
/19 4W1-W0045-10	BRAKE PAD KIT, front	1
/20 91490-20015	·PIN, cotter	1
21 4W1-25913-10	•RETAINER	1
22 4W1-25828-00	·SHIM· caliPer	1
23 1J3-W0048-00	-BREED SCREW KIT.	
/24 4W1-25914-00	·PIN, slide	i i
25 4W1-25836-10	•COVER dust	1
\$26 4L3-25818-00	•BOLT• caliPer	1
527 4L0-25917-00	·BOOT· caliPer	2
28 4W1-25828-50	·SHIM· caliPer	1 UN

5K7332-1350


FIG. 35 FRONT BRAKE CALIPER

REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
29 90101-10500	BOLT	4	
N 530 92906-10100	WASHER, spring	4	
<b>/</b> 31 92906-10200	WASHER	4	

E15

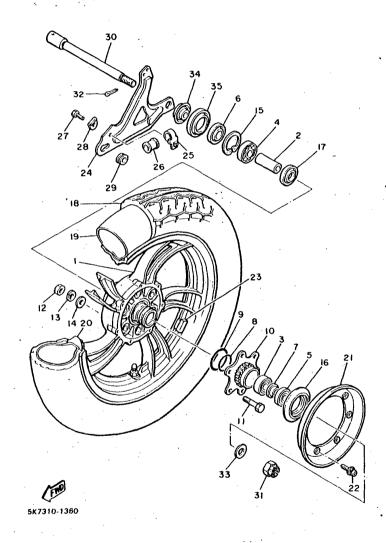

REF		DESCRIPTION	Q'TY	REMARKS
1	5K7-W2533-10-8L	CAST WHEEL, rear	ı	nebular <b>£</b> old
/ 2	2H7-25317-00	SPACER, bearing	1	•
<b>~</b> 3	93313-62010	BEARING, cylindrical	1	٠
1	93306-30404	BEARING (B6304Z)	-1	
<b>-</b> 5	93102-25045	OIL SEAL	1	
_ 6	93104-27026	OIL SEAL	1	<u>!</u>
17	90387-20541	COLLAR	1	
<b>∠</b> 8 .	93210-41358	O-R I NG	t	
<b>/</b> 9	93210-58144	O-& I NG	1	
<b>/</b> 10	2H7-25366-00	CLUTCH, hub	1	
- 11	90109-10491	BOLT	6	
<b>/</b> 12	95380-10600	NUT	6	
/ 13	92901-10100	WASHER, spring	6	
14	90201-10124	WASHER, Plate	6	
<b>/</b> 15	93420-52014	CIRCLIP	1	
WS 16	1J7-25319-01	SEAL. hub dust	1	
/ 17.	2H7-25315-00	FLANGE. sPacer	1	
X 18	94145-17598	TIRE (4.50-17)	1	
∠ 19	94245-17132	TUBE (4.50-17)	1	
<b>/</b> 20	2H7-25394-00	SPACER, bead	2	
<b>/</b> 21	4H1-25327-00	COVER, Plate	1	
/22	90159-05018	SCREW, with washer	4	
_ 23	141-25398-01	BALANCER, wheel (20G)	1 6	IN .
/	141-25399-00	BALANCER, wheel (10G)	1 0	IN
/	2MO-52339-00	BALANCER, wheel (30G)	1 0	IN .
- 24	3H3-25371-00	PLATE, torque stopper	1	
15 25	2H7-25886-00	HDLDER, brake hose	1	
26	306-25881-00	PROTECTOR. brake hose		-

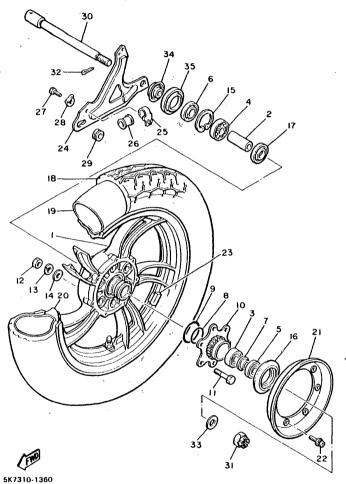

REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
27 97306-06014	BOLT	1	
28 90215-06128	WASHER. Lock	1	
29 3H3-25374-00	SPACER, torque stopper	t	
30 2H7-25381-00	AXLE, whee!	1	
31 90171-18008	NUT, castle	. 1	
5 32 91401-40040	PIN, cotter	1	
33 90201-18620	WASHER, Plate	1	
34 3H3-25377-00	COLLAR, wheel	1	
35 IJ7-25367-00	COVER. hub dust	ì	

F<sub>3</sub>


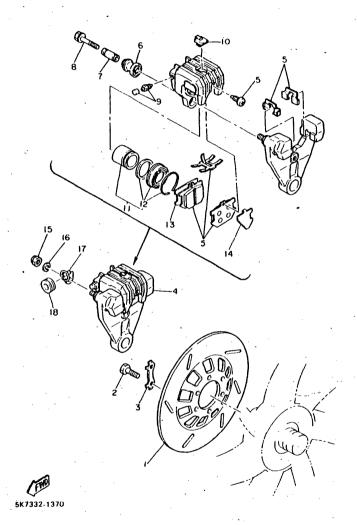


FIG. 37 REAR BRAKE CALIPER

REF.	PART NO.	DESCRIPTION	Q'TY	REMARKS
/ 1	4H3-25831-00	DISC, brake	1 -	
, 2	90101-08312	BOLT	6	
· 3	1 J3-25834-01	WASHER, lock	3	•
. 4	3J6-25810-52	CALIPER ASSY	.1	
/ 5	3H5-W0045-01	*BRAKE PAD KIT, front	1	
6	I J3-25917-00	•BOOT • caliPer	1.	
7	1 J3-25838-00	·SLEEVE, caliper	f	
/ 8	9010508145	*BOLT, washer based	1	
<b>/. 9</b> ,	1 J3-W0048-00	BREED SCREW KIT	1	
/ 10	1 J3-25845-01	•CAP• indicator	1	
11	1 J3-W0057-00	PISTON ASSY, califer	. 1	
12	1 J3-W0047-00	CALIPER SEAL KIT	1	
13	3H5-25827-00	•SHIM, caliPer	1 .	
14	3H5-25828-00	·SHIM· catiPer	1	
r5 9	95303-08800	NUT, crown	1	
16 9	92903-08100	WASHER, spring	1	
17 3	3H3-25887-00	HOLDER, brake hose	1	
18 3	341-25881-00	PROTECTOR. brake hose	. 1	

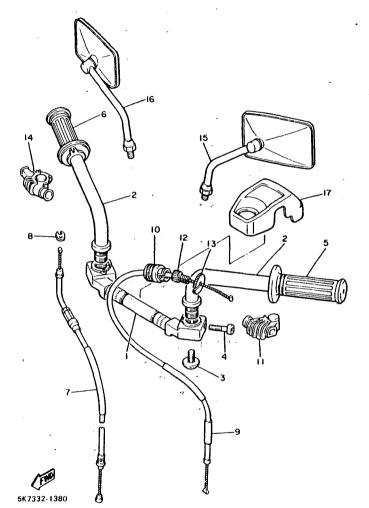

REF. NO. PART NO.	DESCRIPTION	Q <sup>†</sup> TY	ŘEMARKS
1 5K7-26111-00	HANDLEBAR	. 1	
2 5K7-26112-00	BAR, handle	2	
3 5K7-26114-00	STOPPER, handle bar	2	
4 91316-06030	BOLT	2	
5 2H7-26241-00	GRIP (L.H)	1	
6 2H7-26240-00	GRIP ASSY	1	
7 2H9-26311-00	CABLE, throttle 1	1	
\$ 8 584-26393-02	HOLDER	1	
9 5K7-26335-00	CABLE, clutch	1	
10 1E6-26342-00	BOOT, cable	1	
11 1E6-26372-00	COVER: handle lever	1	
12 90123-08046	BOLT	1	
13 90179-08148	NUT	1	
14 175-26372-00	COVER: handle lever	1	
15 4L3-26290-30	MIRROR ASSY	1 -	
16 4L3-26290-40	MIRROR ASSY	1	
-17. 5K7-26213-00	COVER+ uPPer	ı	

F<sub>5</sub>

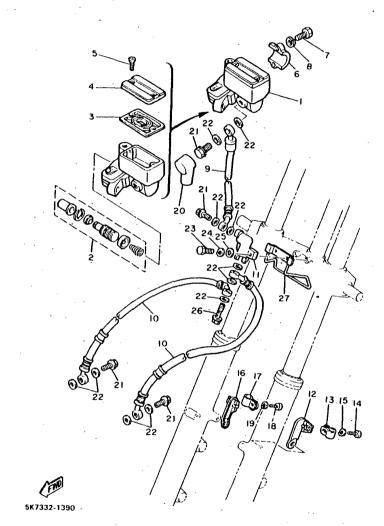


FIG. 39 FRONT MASTER CYLINDER


REF. NO. PART NO.	DESCRIPTION	Ø, LA	REMARKS
1 4K0-25850-00	MASTER CYLINDER ASSY	1	
2 4K0-W0041-00	•CYLINDER KIT, master	1	
- 3 4K0-25854-00	•DIAPHRAGM» reservoir	. 1	
4 4K0-25852-00	·CAP· reservoir	1	
<b>5</b> 98706-04010	•SCREW• flat head	2	
6 4L0-25867-00	BRACKET, master cylinder	1	
7 97326-06025	BOLT	2	•
8 92906-06100	WASHER, SPring	2	
9 5K7-25872-00	HOSE, brake 1	1	
- 10 3H3-25873-00	HOSE, brake 2	2	
11 1J7-25885-01	JOINT	1	
12 2H7-25875-00	HOLDER, brake hose 1	1	
13 90461-10034	CLAMP	1	
14 92506-06012	SCREW, Pan head	1	
15 92906-06100	WASHER, SPring	,	
16 2H7-25876-00	HOLDER, brake hose 2	1	
17 90461-10034	CLAMP	1	
92506-06012	SCREW, Pan head	1	-
19 92906-06100	WASHER, spring	1	
20 4L0-25862-00	BOOT, master cylinder	1	
21 90401-10034	BOLT, union	4	
22 - 90201-10118	WASHER, Plate	11 -	
23 97301-06025	BOLT	1	•
24 92901-06100	WASHER. sPring		
25 92901-06600	WASHER. Plate	1.	
26 90401-10044	BOLT, union	1	
27 1J7-26399-00	GUIDE, cable	, .	

5K7310-1400

FIG.	40	ST	AMD.	EUU	POPCY

REF NO		DESCRIPTION	Q'TY	REMARKS
1	5K7-27410-00-33	FRONT FOOTREST ASSY (L.H)	1	yamaha black
<u>,                                    </u>	1J7-27413-01	·COVER· footrest	1	
<b>/</b> 3	90508-20023	·SPRING, torsion	1	-
× 4	4H3-27418-00	·PIN· clevis	1	
<b>Y</b> 5	4H3-14766-00	·WASHER · Protecter	1	
<b>/</b> 6	5K7-27420-00-33	FRONT FOOTREST ASSY (R+H)	1	yamaha black
ノフ	1J7-27413-01	•COVER• footrest	t	
∕ B	90508-20023	•SPRING, torsion	1	
<b>火</b> 9	4H3-27418-00	•PIN• clevis	1	
X 10	4H3-14766-00	·WASHER, Protecter	1	
111	4W5-27430-00	REAR FOOTREST ASSY 1	1	
12	4W5-27440-00	REAR FOOTREST ASSY 2	1	
<b>∠</b> 13	95706-10100	NUT, flanse	2	
NS 14	95826-10035	BOI.T, flande	2	
× 15	3H3-27111-01	STAND. main	1	
/16	90109-10440	BOLT	2	
J 17	95601-10100	NUT, u	2	
<b>/</b> 18	90506-45199	SPRING, tension	1	
<b>/</b> 19	3H3-27311-00	STAND, side	1	
. ∕ 20	90109-10473	BOLT	1	•
/21	95301-10700	NUT	1	
<b>✓</b> 22	90506-28146	SPRING, tension	1	
<b>∠</b> 23	140-27114-00	STOPPER, main stand	1	
<b>→ 24</b> .	5K7-27442-00	BRACKET 2	1	
25	5K7-27443-00	BRACKET 3	1	
<b>∠</b> 26	4H3-27434-00	BOLT	3	
<b>/</b> 27	3H3-27414-00	DAMPER, footrest	2	

F7

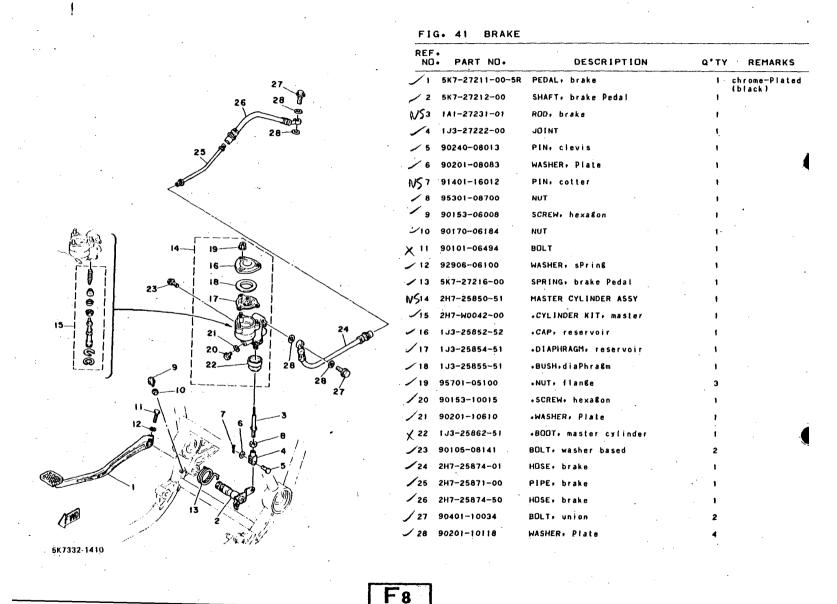

5K7332-1420

· FIG	3. 42 COWLIN	IG		
REF NO		DESCRIPTION	Q'TY	REMARKS
11	5K7-28351-00-6G	BODY, cowling	1	new yamaha bia-
/ 2	5K7-28381-00	WINDSHIELD	1	CK
/ 3	90157-05020	SCREW, Pan head	9	
/4	90202-051,23	WASHER, Plate	9	
/ 5	90170-05277	NUT	9	
<b>/</b> 6	5K7-28376-00	TRIM	1	
17	5K7-28385-00-6G	COVER, lower	1	new yamaha bia- ck
NS 8	4X7-24742-00	GROMMET	2	CK
<b>х</b> 9	5K7-28188-00	PLUNGER	2	
10	5K7-28376-10	TRIM	1	
/11	448-24786-00	EMBLEM	1	
/ 12	5K7-28356-00	STAY 1	t	,
NS13	97306-06012	BOLT	2	
ار 14	92906-06100	WASHER, spring	2	
<b>/</b> 15	92906-06600	WASHER. Plate	. 2	
·/16	5K7-28357-00	STAY 2	. 1	
ン17	5K7-28358-00	STAY 3	; 1	
18	97306-08012	BOLT	2	
/ 19	92906-08100	WASHER, sPring	2	
/20	92906-08200	WASHER, Plain	2	
X 21	95306-08600	NUT	2	
AS22	5K7-28352-00	SCREW, fitting	2	
<b>/</b> 23	90179-06013	NUT	2	
/ 24	5K7-28366-00	BRACKET	1	

BRACKET


NUT

WASHER. sPring

F<sub>9</sub>

25 5K7-28367-00 NS 26 97306-06012

27 92906-06100 NS28 5K7-28362-00

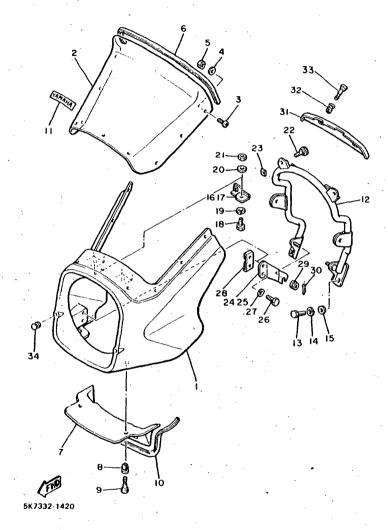

REF NO		DESCRIPTION	Q'TY	REMARKS
<b>/</b> 29	95706-06100	NUT, flange	2	
<b>/</b> 30	90468-10050	CL1P .	2	
/ 31	5K7~28395-00	COVER, under	f	
NS 32	4X7-24742-00	GROMMET	. 2	• *
X 33	5K7~28188-00	PLUNGER	2	
NS34	90338-06018	PLUG	1	

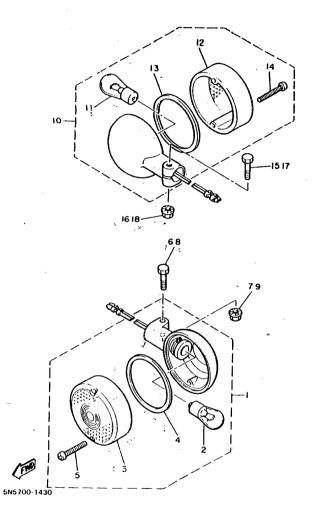


FIG. 43 FLASHER LIGHT

REF	•			•
NO		DESCRIPTION	a,t.	REMARKS
<b>-</b> 1	5N5-833   O-KO	FRONT FLASHER LIGHT ASSY I	ź	
-2	256-83311-70	.BULB (12V-27W)	1	
/ 3	4H7-83312-00	·LENS, flasher	1	•
- 4	4H7-83313-00	•GASKET» flasher lens	1	
<b>/</b> 5	98501-03030	·SCREW. Pan head	2	
156	95806-06030	BOLT. flande	1	
/7	95706-06100	NUT, flande	1	
158	95806-06030	BOLT, flande	.1	
9	95706-06100	NUT, flande	1	
10	5N5-83330-KO	REAR FLASHER LIGHT ASSY 1	2	
11	256-83311-70	.BULB (12V-27W)	1	
12	4H7-83312-00	•LENS• flasher	,1	
13	4H7-83313-00	.GASKET, flasher lens	1	
14	98501-03030	.SCREW. Pan head	2	
15	95806-06030	BOLT, fiante	1	
16	95706-06100	NUT. flante	1	
17	95806-06030	BOLT, flands	1	
18	95706-06100	NUT, flands	1	

Fii

5K7332-1440

FIG. 44 SPEEDOMETER. TACHOMETER


REF. NO. PART NO.	DESCRIPTION	Q'TY	REMARKS
/ 1 5K7-83570-F0	SPEEDOMETER ASSY	1	
2 3J6-83536-01	·SOCKET, meter	t	
3 4R0-83517-00	·BULB (12V-3·4W)	2	
4 584-83578-71	•KNOB• triP meter	1.	
5 5K7-83540-00	TACHOMETER ASSY	1	
6 5K7-83520-00	SOCKET CORD ASSY	1	
7 4RO-83517-00	.BULB (12V-3.4W)	4	
8 5K7-83507-00	COVER, speedometer	1	
9 4H3-83508-00	COVER, tachometer	1 .	
10 5K7-83568-00	PILOT BOX, upper	1	
11 3J6-83569-A0	PILOT BOX, lower	١,	
12 5K7-83509-00	SOCKET CORD ASSY	1	
13 4R0-83517-00	BULB (12V-3.4W)	4	
14 3J6-83519-00	BRACKET, meter	. 1	
15 5K7-83513-00	DAMPER	2	
16 584-83546-00	BOLT	4	
17 92901~06200	WASHER. Plain	4	
18 92901-06100	WASHER. sPring	4	
19 95301-05800	NUT, crawn	4	
20 95301~06800	NUT, crown	4	
21 90201-05031	WASHER. Plate	4	
22 584-83523-00	DAMPER	. 4	
23 98506-04012	SCREW. Pan head	2	
24 92906-04100	WASHER. spring .	2	
25 92906-04600	WASHER. Plate	2.	
26 98501-04014	SCREW, Pan head	1	•
27 92901-04100	WASHER, spring	1	
28 92901-04600	WASHER, Plate	1	

5K7332-1440

FIG. 44 SPEEDOMETER. TACHOMETER

NO	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	97306-06040	BOLT	2	
30	95301-06600	TUN	2	
- 31	584-83541-00	DAMPER	. 4	
- 32	92901-06100	WASHER, spring	2	
- 33	90201-06067	WASHER, Plate	2	
<b>/</b> 34	90387-06249	COLLAR	2	
<b>/</b> 35	3Н3-83550-00	SPEEDOMETER CABLE ASSY	1	
<b>/</b> 36	90153-06004	SCREW. hexagon	1	

F13

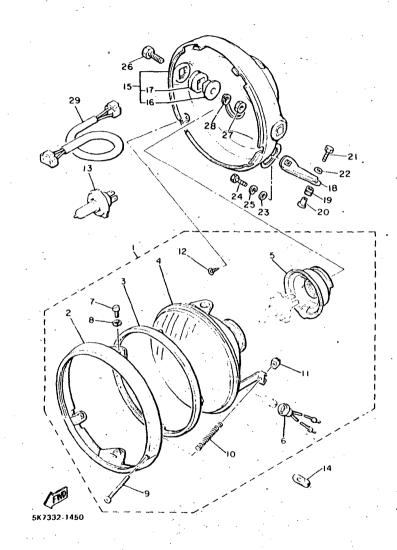

REF NO		DESCRIPTION	Q'TY	REMARKS
1	4E2-84303-E0	HEADLIGHT UNIT ASSY	1	
/ 2	4E2-84315-00	•RIM• headlight	1	
<b>/</b> 3	4E2-84395-00	•RING• retaining	1	
1	4E2-84321-E0	•LENS• headlight	,1	
<b>/</b> 5	4E2-84397-00	·COVER, socket	. 1	-
<b>/</b> 6	457-84146-85	.SOCKET. Pilot light .	1	
1	98501-05010	·SCREW. Pan head	2	
<b>~</b> 8	92902-05100	·WASHER, sPring	.2	
<b>/</b> 9	447-84331-61	·SCREW· rim adjusting	1	
<b>-</b> 10	447~84332-60	·SPRING, screw	1	
/11	198-84334-60	•NUT, adjusting	. 1	
12	90152-05005	SCREW, countersunk	. 2	
13	• .	BULB (12V-60/55W)	i	LM
14	•	BULB (12V-3.4W)	1	LM
15	4E2-84330-00-5R	BODY ASSY		chrome-Plated
16	584-84338-60	·COLLAR· body fitting	. 2	(black)
/17	584-84345-60	·DAMPER· headlight	2	
/18	5K7-84318-00	STAY, headlight 1	1	
519	90480-16114	GROMMET	. 1	
/20	90387-07038	COLLAR	1	
21	97306-06025	BOLT	1	
/22	90201-06709	WASHER, Plate	1	
23	90201-06552	WASHER, Plate	. 1	
/24	97306~06016	BOLT	<i>i</i> 1	•
25	92906-06100	WASHER, sPring	1	
\$26	97306~08035	BOLT	2	
27	95301~08600	NUT	2	


FIG. 45 HEADLIGHT

REF.
NO. PART NO. DESCRIPTION Q'TY REMARKS

29 2H7-84359-00 CORD, headlight 1

F15

4

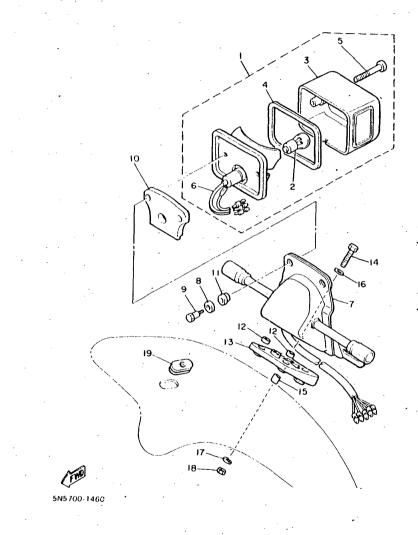

	F	I	G	٠	46	T	A	I	L	L	I	G١	4.	Т
•							_	_		_			-	
			_											

NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	5N5-84710-F0	TAILLIGHT UNIT ASSY	1	
/ 2	256-84714-61	.BULB (12V-27/8W)	. 1	
/ 3	1M1-84521-60	·LENS, taillight	1	\$
1	1M1-84523-60	·GASKET, lens	.1	
<b>5</b>	IM1-84524-60	SCREW, lens fitting	2	_
156	5K7-84717-00	·CORD· taillight		
NS 7	5K7-84751-00-6G	ERACKET. Licence		ew yamaha bla—
/8	2H7-84754-00	WASHER. special	2 °	
/ 9	IMI-84526-60	SCREW	2	
/10	1M1-84512-60	SEAT, base	1	
/ 11	IM1-84527-60	DAMPER	2	
/12	2G2-84753-00	DAMPER	2	
<b>/</b> 13	2G2-84736-00	DAMPER, tail	1	
<i>/</i> 14	97301-06035	BOLT	. 4	
<b>/</b> 15	90387-06605	COLLAR	4 .	
/ 1,6	90201-06067	WASHER, Plate	4	
/17°	92901-06100	WASHER, spring	4	• .
/ 18	95301-06600	NUT	4	
/19	90480-15061	GROMMET	1	


B 9 20
3 2
16
13 14 9 19
15 9 19
16 6 5

FIG	47 HANDLE	SWITCH+LEVER	· · · · · · · · · · · · · · · · · · ·	
REF	·	DESCRIPTION	Q'TY	REMARKS
1	1A0-83980-30	FRONT STOP SWITCH ASSY	İ	
<b>/</b> 2	2н9-83963-00-98	SWITCH, handle 3	1	low floss black
/ 3	98506-05030	•SCREW• Pan head	1	
NS 4	98506-05040	.SCREW. Pan head	1	
<b>/</b> 5	175-83972-00-98	SWITCH, handle 4	1	low Bloss black
<u> </u>	98506-05030	·SCREW· Pan head	2	
J 7	437-83936-00	BAND, switch cord	2	
/ 8	2J2-83922-00	LEVER 2	1	
_ 9	90149-06131	SCREW	1	
<b>/</b> 10	90170-06010	NUT	1	
11	4K0-82911-00	HOLDER. lever 1	· 1	
12	2H7-83912-00	LEVER 1	1	
<b>/</b> 13	3Y6-82917-00	SWITCH	1	
<b>~</b> 14	2H7-83945-00	BOLT, lever	1	
15	90201-08083	WASHER, Plate	1	
<b>/</b> 16	95601-06100	NUT, u	1	
17	93210-11368	O-RING	1	
18	97306-06022	BOLT	1	
<b>/</b> 19	92906-06100	WASHER. spring	t	
<b>/</b> 20	90109-06465	BOLT	1	

SPRING, compression

**FWD** 5K7332-1470

Gз

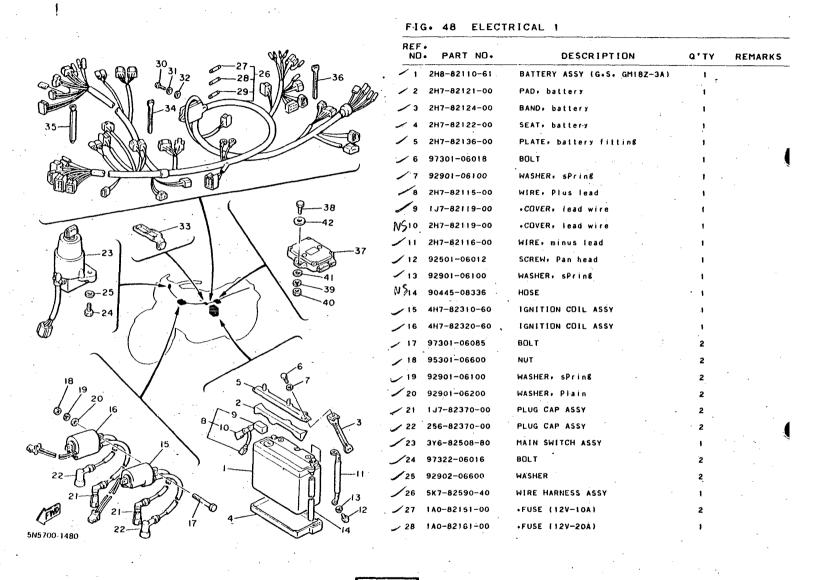

5N5700-1480

FIG. 48 ELECTRICAL 1

REF.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	2H7-82151-00	•FUSE (12V-30A)	1	
30	98501-05016	SCREW, Pan head	2	
-31	92901-05100	WASHER, spring	2	•
32	92901-05600	WASHER, Plate	. 2	
- 33	90465-10133	CLAMP	1	
_34	447-82591-00	BAND	1	
35	341-26397-01	BAND	2	
36	435-13474-00	BAND	45	
37	4R0-82305-10	IGNITOR UNIT ASSY	1	
38	97301-06020	BOLT	2	
<b>/</b> 39	92901-06100	WASHER, SPring	2	
-40	95301-06600	NUT	2	
41	92901-06200	WASHER, Plain	2	
- 42	90201-06063	WASHER, Plate	2	

G5


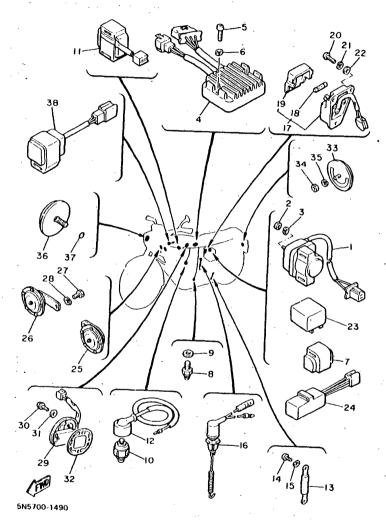


FIG. 49 ELECTRICAL 2

REF		DESCRIPTION	Q'TY	' REMARI	(S
اس	1J7-81940-10	STARTER SWITCH ASSY	. 1	UR ·	
	3H5-81940-00	STARTER SWITCH ASSY	1	UR	
<b>✓</b> 2	95301-06700	TUN	2	,	
ン 3	92901-06100	WASHER, sPring	<b>,2</b>		
X 4	174-81960-A0	RECTIFIER & REGULATOR ASSY	1		
<b>✓</b> 5	92501-06030	SCREW. Pan head	2		
<b>/</b> 6	92901-06100	WASHER. sPring	2		$\sim$ $\sim$
17	4H7-81950-01	STARTER CURCUIT CUT-OFF RELAY	1		
<u>/</u> 8	2H7-82540-00	NEUTRAL SWITCH ASSY	1		
NS 9	90430-10148	GASKET	1		
10	341-82504-02	OIL PRESSURE SWITCH ASSY	1		
Z 11	2H7-82576-00	EMERGENCY STOP SWITCH ASSY	1	-	
/ 12	2H7-82507-00	WIRE, lead	1		
13 🗸	2H7-82519-00	WIRE, earth lead	1		
14	92501-06012	SCREW, Pan head	1		
/ 15	92901-06100	WASHER, spring	1		٠.
<b>/</b> 16	1J7-82530-00	STOP SWITCH ASSY	1	•	
17	2H7-81920-00	TERMINAL ASSY	1		٠
/18	140-82151-00	•FUSE (12V-10A)	1		•
NS 19	2H7-81916-00	•COVER• terminal	1		
/ 20	98501-05016	SCREW. Pan head	3		
/21	92901-05100	WASHER. SPring	3		â
122	92901-05600	WASHER, Plate	3		<b>Y</b>
/23	4E6-83350-70	FLASHER RELAY ASSY	1		
124	140-83395-03	FLASHER CANCELLING UNIT	1		
/25	2H9-83371-20	HORN	1	hight tone	
/26	2H9~83371~30	HORN	1	low tone	
NS27	97306-08014	BOLT	2		

FIG. 49 ELECTRICAL 2

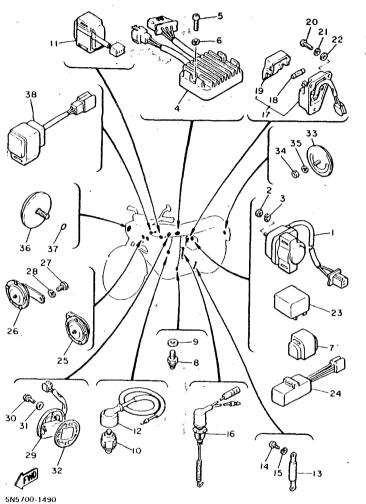

REF NO		DESCRIPTION	Q'TY	REMARKS
28	92906-08100	WASHER: sPring	2	
29	3H3-85752-00	SENDER UNIT ASSY, fuel meter	1	
30	95801-06014	BOLT, flande	4	
31	90202-06010	WASHER. Plate	4	
32	2H7-85753-00	GASKET, sender unit	1	
/33	449-85131-01	REFLECTOR, rear 1	1	
34	95301-05600	NUT	1	
<b>/</b> 35	92902-05100	WASHER. sPring	1	•
<b>/</b> 36	2N8-85111-00	REFLECTOR, front 1	2	
537	90430-06012	GASKET	2	
/38	3X0-8357A-00	ILLUMINATION CONTROL UNIT ASSY	1	

G7